

Operating Instructions for Magnetic Level Switches Model: MS Series

MS series

1. Contents

1. Contents	2
2. Note	3
3. Instrument Inspection	3
4. Regulation Use	
5. Float designs	4
6. Operating Principle	6
7. Mechanical Connection	6
8. Area of application	6
9. Maintenance	6
10. Technical Data	7
11. Electrical Information	8
12. Safety Instructions	11
Area of validity	11
Guidelines	11
Protection against ESD (electro static discharges)	11
Chemical resistance	12
Maintenance and repairs	12
Storage	12
13. Installation in hazardous zone	12
14. Electrical connection in ATEX zone	13
15. ATEX Label Description	13
16. Disposal	14
17. Declaration of conformity ATEX Ex ia	15
18. EU Declaration of Conformity	16
19. UK Declaration of Conformity	17
20. ATEX Certified	18
21. Notes	23

Manufactured by:

Kobold Mesura S.L.U. Avda. Conflent 68 nave 15 08915 Badalona Tel.: +34 93 460 38 83

Fax: +34 93 460 38 76
E-Mail: info.es@kobold.com
Internet: www.kobold.com
Edition: Dec. 2022

page 2 DT0493

2. Note

Please read these operating instructions before unpacking and putting the unit in operation. Follow the instructions precisely as described herein.

The instruction manuals on our website www.kobold.com are always for currently manufactured version of our products. Due to technical changes, the instruction manuals available online may not always correspond to the product version you have purchased. If you need an instruction manual that correspond to the purchased product version, you can request it from us free of charge by email (info.de@kobold.com) in PDF format, specifying the relevant invoice number and serial number. If you wish, the operating instructions can also be sent to you by post in paper form against an applicable postage fee.

The devices are only to be used, maintained and serviced by persons familiar with these operating instructions and in accordance with local regulations applying to Health & Safety and prevention of accidents.

When used in machines, the measuring unit should be used only when the machines fulfil the EC-machine guidelines.

3. Instrument Inspection

Instruments are inspected before shipping and sent out in perfect condition. Should damage to a device be visible, we recommend a thorough inspection of the delivery packaging. In case of damage, please inform your parcel service / forwarding agent immediately, since they are responsible for damages during transit.

Scope of delivery:

The standard delivery includes:

- Magnetic Level Switches for Liquids model: MS-...
- Operating Instruction

All parts falling under the standard scope of delivery are properly assembled within the unit.

page 3 DT0493

4. Regulation Use

Magnetic Level Switches are employed for monitoring and control of liquid-levels in boilers and containers. There are innumerable and diverse applications that require these Magnetic Level Switches to be made according to customers' specific requirements.



Attention! These units should not be installed in the vicinity of strong magnetic fields, since this can impair their intended functionality.

5. Float designs

Model	Form	Materials	Float Outside Ø [mm]	Height [mm]	Bore Hole Ø [mm]	Min. Liquid Density [kg/dm³]	Max. Temperature °C	Nominal Pressure [bar] at 20 °C
MS05	Cylinder hollow	PP	42	40	14	> 0.5	80°C	3 bar
MS06 ¹⁾	Cylinder solid material	PP	40	20	14	> 0.9	90 °C	100 bar
MS07	Cylinder hollow	PVC-U	42	40	14	> 0.65	55 °C	3 bar
MS10	Ball hollow	St. steel 1.4404	52	52	15	> 0.6	150°C	30 bar

¹⁾ For MS06 model. one float is required for each switch point. For all other floats two contacts can be operated with one float.

page 4 DT0493

Supplementary devices:

1. Contact protection relays

We recommend the use of contact protection relays in conjunction with sealed contacts.

Contact protection relays have the following advantages:

- No contact overloads arising from sparking and high currents, which can, for example, be caused by self-induced e.m.f.'s when switching solenoid valves.
- Float switches are electrically isolated from the high voltage power supply system.
- Protection for persons who come into contact with liquids according to VDE 0100.

• Standard models:

```
Mod. MSR 10 1 channel, 1 changeover
Mod. MSR 20 2 channels, 2 changeover
Mod. MSR 11 2 channels, 1 changeover bistable
```

Atex models:

```
Mod. KFD2-SR2-Ex1.W 1 channel, 1 relay output, supply 24 V_{DC} Mod. KFA6-SR2-Ex1.W 1 channel, 1 relay output, supply 230 V_{AC} Mod. KFD2-SR2-Ex2.W 2 channel, 2 relay output, supply 24 V_{DC} Mod. KFA6-SR2-Ex2.W 2 channel, 2 relay output, supply 230 V_{AC}
```

2. Damping tube for agitated liquids

Float switches with damping tube for agitated or dirty liquids can be supplied upon request.

3. Temperature monitoring

Float switches with integrated temperature switch, fixed switch point between 60 °C and 150 °C upon request.

Option: Pt 100 available

4. Mounting instructions

Float switches can also be fitted in the bottom for vessels.

Attention: The contact operation is then reversed.

page 5 DT0493

6. Operating Principle

Kobold magnetic float switches are fitted with a hermetically sealed contact which is situated in the tube.

The float sliding on the tube contains a ring magnet whose magnetic field switches the sealed contact in a non-contacting fashion. The sealed contacts are available as N/O, N/C or changeover contacts.

The float sliding up and down on the liquid is the only moving part in the Kobold magnetic float switches.

7. Mechanical Connection

The slide-tube of the float switch may not be bent or exposed to hard impacts, since otherwise the reed contacts inside the tube can be damaged.

Adjustment-rings or anchor-clamps may not be readjusted, since otherwise the switching function (N.O. contact, N.C. contact or changeover switch) is no more guaranteed.

Ensure the correct use of cable gland and gasket on float switches with plug to prevent the penetration of humidity.

While installation is carried out, please ensure that the float can move freely (due allowance should be given to distances from side-walls!).

Mounting position of the slide-tube may not deviate more than ±30° from vertical position.

If the float has to be removed, pay attention to correct orientation when replacing the float.

8. Area of application

Magnetic level switch MS series are used exclusively for level control and monitoring of liquid media.

The liquids should not contain suspended solids or tendency to crystallize. Ensure that the construction materials of the float switch have chemical resistance sufficient to prevent mechanical deformations that may affect it.

9. Maintenance

In liquids that can cause deposits, the float has to be cleaned at regular intervals. In this case the measuring tube and float should be cleaned from such deposits. Other maintenance jobs are not required.

page 6 DT0493

10. Technical Data

Contact NO/NC: 230 V_{AC/DC} / 1 A / 60 VA (MS05...MS10) Contact SPDT: 230 V_{AC/DC} / 1 A / 60 VA (MS05...MS10) Atex-version: Ui: 40V, Li: negligible, Ci: negligible

Protection type: IP65

Min. liquid density: See float design table

Max. pressure (at 20°C): 3 bar (MS05, MS07)

30 bar (MS10) 100 bar (MS06)

Max. temp. with PVC cable: 55°C (models with PVC tube)

70°C (Models without PVC tube)


Max. temp. with. silicone cable: See max. temperature in float design table

Max. length of guide tube: 2 m (PVC Ø12 mm)

4 m (st. st. or brass Ø12 mm)

Hysteresis: 5 mm difference in level

Definition of switching points referred to density 1 Kg/dm³

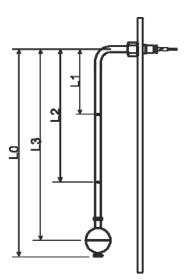

Attention models without earth conductor must be used only with safety extra low voltage (i.e. contact protection relays) or external earthing.


page 7 DT0493

11. Electrical Information


Performance data indicated on the device label are absolute maximum ratings, which may **not** be exceeded even for brief periods of time. They refer to ohmic load (resistive load). When switching inductances (e.g. coils from relays and contactors), the contacts of the float switches should be protected employing suitable means from high cut-off voltage surges.

Examples of protection circuitry


For capacitive, inductive and lamps load, we recommend our contact protection relays or the following suppressor circuits.

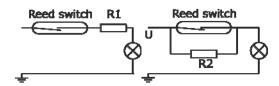


Lamp load with series or parallel resistance to the reed switch.

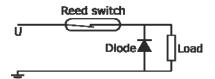

Protection with a diode for d.c. current and inductive load.

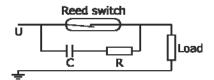

Protection with a RC suppressor for a.c. current and inductive load.

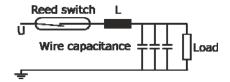

Protection with an inductance or resistance for capacitive load.

The Magnetic Level Switches are connected according to the following connection diagrams.



Attention! While making electrical connections of these devices, please observe relevant safety measures, norms, regulations and EG-guidelines, in particular, DIN VDE 0100, section 610. Float switches made of PVC can be used up to max. 55 °C!

page 8 DT0493

Connection diagrams

Colour coding per DIN 47100

Terminal connection coding in connection head	Cable colour coding (DIN47100) for standards in silicone and PVC	
1	WH	White
2	BN	Brown
3	GN	Green
4	YE	Yellow
5	GR	Grey
6	PK	Pink
7	BU	Blue
8	RD	Red
9	BK	Black

^{*} For special cables the codification is by numbers

Models MS05....MS10

1 switch point (L1)

L1- S or C	L1- W
	WH 1-3-7
WH 1————————————————————————————————————	BN 2
DIV 2	GN 3

2 switch points (L1, L2)

L1- S or C	L1- W	L1- S or C	L1- W
L2- S or C	L2- W	L2- W	L2- S or C
WH 1————————————————————————————————————	WH 1 BN 2 GN 3 YE 4 GR 5 PK 6	WH 1————————————————————————————————————	WH 1 GN 3 YE 4 GR 5

page 9 DT0493

MS series

3 switch points (L1,	L2, I	L3)
-------------------	-----	-------	-----

L1- S or C L2- S or C L3- S or C	L1- W L2- W L3- W	L1- S or C L2- S or C L3- W	L1- S or C L2- W L3- S or C	L1- W L2- S or C L3- S or C
WH 1————————————————————————————————————	WH 1 BN 2 GN 3 YE 4 GR 5 PK 6 BU 7 RD 8 BK 9	WH 1 BN 2 GN 3 YE 4 GR 5 PK 8 BU 7	WH 1 BN 2 GN 3 YE 4 GR 5 PK 6 BU 7	WH 1 BN 2 GN 3 YE 4 GR 5 PK 6 BU 7
L1- W L1- W L3- S or C	L1- W L2- S or C L3- W			
WH 1 BN 2 GN 3 YE 4 GR 5 PK 6 BU 7 RD 8	WH 1 BN 2 GN 3 YE 4 GR 5 PK 6 BU 7 RD 8			

page 10 DT0493

12. Safety Instructions

Area of validity

These security instructions apply to **MS...E** series magnetic level switch for use in explosion-proof atmospheres conform to **CE certificate LOM 06ATEX2054 X.**

Guidelines.

These security instructions must be applied to the **MS...E** series used in gas or dust explosion hazard environments, category 1G/D.

It is necessary to follow carefully the instructions from the hazardous areas where the **MS...E** will be installed, as well as the safety instructions included in this manual.

Temperature class and/or surface temperature relates solely to a device operated at ambient temperature. On installation, the actual temperature class for process operation has to be determined.

Inlet bushing and cable glands must conform to the certification for their type in accordance with the directive.

Models without head box must be protected with an enclosure having at least a degree of protection IP20.

Verify that all data written in the label of the device matches the data required for the installation.

Verify that there is no mechanical stress or deformation due to installation in the tank.

Remove power supply and verify that no explosion risk is present before opening cover of the housing.

Check that cover of housing is correctly mounted before applying power to the instrument.

The installation of instruments in hazardous areas must be exclusively done by trained people.

Protection against ESD (electro static discharges)

Instruments with plastic parts that can produce electro statics discharges, have a label for it.

It is important to follow some rules to avoid ESD:

- Avoid rubbing the device.
- Never clean the device dry.
- Do not install the device near material airflows or near steam outlets.

page 11 DT0493

MS series

Chemical resistance

Ensure that the device construction materials have chemical resistance sufficient to prevent mechanical deformations that may affect the device.

Maintenance and repairs

In liquids that can cause deposits, the float switch has to be cleaned at regular intervals. In this case the measuring tube and float should be cleaned from such deposits. Other maintenance jobs are not required.


Repairs must be only carried out by Kobold Mesura (manufacturer).

Storage

Measuring instruments should be protected against humidity and dust. Storage temperature: -5...+55°C


13. Installation in hazardous zone

In classified zones, magnetic level switches series **MS**...**E** (ATEX version), can be installed in zone 0, 1, 20, 21 or in a not classified area. Installation must be done with trained people on ATEX environments.

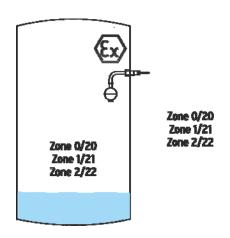


page 12 DT0493

14. Electrical connection in ATEX zone

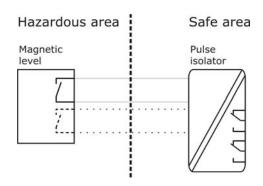

15. ATEX Label Description

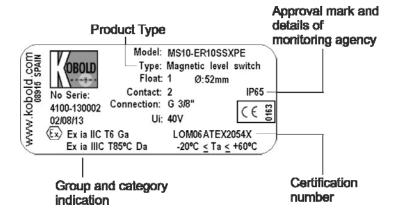

page 13 DT0493


16. Disposal

Note!

- Avoid environmental damage caused by media-contaminated parts
- Dispose of the device and packaging in an environmentally friendly manner
- Comply with applicable national and international disposal regulations and environmental regulations.

Batteries

Batteries containing pollutants are marked with a sign consisting of a crossed-out garbage can and the chemical symbol (Cd, Hg, Li or Pb) of the heavy metal that is decisive for the classification as containing pollutants:

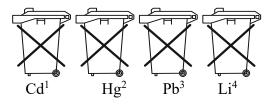

- 1. "Cd" stands for cadmium
- 2. ,Hg" stands for mercury
- 3. "Pb" stands for lead
- 4. "Li" stands for lithium

Electrical and electronic equipment



page 14 DT0493

17. Declaration of conformity ATEX Ex ia

DT0497

DECLARACIÓN DE CONFORMIDAD EU

EC DECLARATION OF CONFORMITY EG-KONFORMITÄTSERKLÄRUNG DÉCLARATION DE CONFORMITÉ DICHIARAZIONE DI CONFORMITÀ CE

KOBOLD MESURA SLU Avda. Conflent 68 nave 15 08915 Badalona (España)

Declara, bajo la propia responsabilidad, que el producto

Declares under our sole responsibility, that the product Erklärt in alleiniger Verantwortung, dass das Produkt Déclare sous sa seule responsabilité, que le produit Dichiara sotto la propia responsabilità, che il prodotto

Magnetic level switch

MS...E

A los cuales se refiere esta declaración, son conformes a las siguiente Directivas Europeas:

To which this declaration relates is in conformity with the following European Directives:

Mit folgenden Euroäischen Richtlinien Konform ist:

À auxquels se réfère cette déclaration, ils sont conformes aux Directives Européennes suivant :

A ai quali si riferisce questa dichiarazione, sono conformi alle direttive europee seguente:

EMC2014/30/EU Atex2014/34/EU RoHS2011/65/EU

Normas armonizadas y documentos de la normativa aplicados:

Applied harmonised standards and normative documents: Angewandte harmonisierte Normen und normative Dokumente: Normes harmonisées et documents normatifs appliqués Norme armonizzate e documenti normativi applicati:

EN61010-1:2020 EN60079-0:2009 (acc. EN60079-0:2018)

EN61000-6-2:2019 EN60079-11:2007

*No changes are required to enable compliance with the replacement standards.

Certificado de examen CE de tipo

EC-type examination certificate EG-baumusterprüfbescheinigung Attestation d'examen CE de type Certificazione per esame di tipo CE

LOM06ATEX2054X

<u>Marcado</u>

Marking Kennzeichnung Inscription Marcatura



II 1 GD Ex ia IIC T6 Ga / Ex ia IIIC T85°C Da -20≤Ta≤+60°C

Fabricado en: KOBOLD MESURA SLU Avda. Conflent 68 nave 15 08915 BADALONA (Spain)

Made in: Hergestellt in: Fabriqué dans: Fabbricato in:

Organismo notificado: LOM 0163

Notified organism Zertifizierungsstelle Organization annoncée Organismo informato

Badalona sept. 2013

Número notificación: LOM 05ATEX9070

Notification number Zertifikatsnummer Nombre notification Notifica di numero

Gerente

a/our

page 15 DT0493

18. EU Declaration of Conformity

DT0498

DECLARACIÓN DE CONFORMIDAD EU

EU DECLARATION OF CONFORMITY EG-KONFORMITÄTSERKLÄRUNG DÉCLARATION DE CONFORMITÉ DICHIARAZIONE DI CONFORMITÀ EU

KOBOLD MESURA SLU Avda. Conflent 68 nave 15 08915 Badalona (España)

Declara, bajo la propia responsabilidad, que el producto

Declares under our sole responsibility, that the product Erklärt in alleiniger Verantwortung, dass das produkt Déclare sous sa seule responsabilité, que le produit Dichiara sotto la propia responsabilità, che il prodotto

Magnetic level switch

A los cuales se refiere esta declaración, son conformes a las siguiente Directivas Europeas:

To which this declaration relates is in conformity with the following European Directives: Mit folgenden Euroäischen Richtlinien Konform ist: À auxquels se réfère cette déclaration, ils sont conformes aux Directives Européennes suivant :

A ai quali si riferisce questa dichiarazione, sono conformi alle direttive europee seguente:

EMC2014/30/EU LVD2014/35/EU RoHS2011/65/EU

Normas armonizadas y documentos de la normativa aplicados:

Applied harmonised standards and normative documents: Angewandte harmonisierte Normen und normative Dokumente: Normes harmonisées et documents normatifs appliqués Norme armonizzate e documenti normativi applicati:

EN61010-1 :2020 EN61000-6-2 :2019

Fabricado en: KOBOLD MESURA SLU Avda. Conflent 68 nave 15 08915 BADALONA (Spain)

Made in: Hergestellt in: Fabriqué dans: Fabbricato in:

Badalona sept. 2013 Gerente

page 16 DT0493

19. UK Declaration of Conformity

DT0665

DECLARACIÓN DE CONFORMIDAD UK

UK DECLARATION OF CONFORMITY UK-KONFOMITÄTSERKLÄRUNG DÉCLARATION DE CONFORMITÉ UK DICHIARAZIONE DI CONFORMITÀ UK

KOBOLD MESURA SLU Avda. Conflent, 68 nave 15 08915 Badalona (España)

We Kobold Mesura S.L.U. declare under our sole responsibility that the product:

Magnetic level switch **MS...**

To which this declaration relates is in conformity with the standards noted below:

BS EN 61010-1:2010

Safety requirements for electrical equipment for measurement, controL, and laboratory use. General requirements

BS EN 61000-6-2:2019

Electromagnetic compatibility (EMC) -- Part 6-2: Generic standards - Immunity for industrial environments

Also, the following UK guidelines are fulfilled:

- S.I. 2016/1091 Electromagnetic Compatibility Regulations 2016.
- S.I. 2016/1101 Electrical Equipment (Safety) Regulations 2016.
- **S.I. 2012/3032** The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012.

Badalona October 2021

Gerente

page 17 DT0493

20. ATEX Certified



LABORATORIO OFICIAL J. M. MADARIAGA



LOW LOW	LOW	ON LOW
(1)	EC-TYPE EXAMINA	TION CERTIFICATE
(2)	Equipment or protective system intended for use in potentially explosive atmospheres Directive 94/9/EC	
(3)	EC-Type Examination Certificate nu	umber: LOM 06ATEX2054 X
(4)	Equipment or Protection System	Level detectors Types MIL EX y RFSEX
(5)	Applicant:	CONTROL INSTRUMENTS MESURA S.L.
(6)	Address	Guifré, 665 1° 08912 BADALONA(BARCELONA) SPAIN
(7)	This equipment or protective system documents therein referred to.	and any acceptable variation thereto is specified in the schedule to this certificate and the
(8)	of the European Parliament of 23 Ma the Essential Health and Safety Req	(LOM), notified body number 0163 in accordance with Article 9 of the Directive 94/9/EC rich 1994, certifies that this equipment or protective system has been found to comply with juirements relating to the design and construction of equipment and protective systems sive atmospheres, given in Annex II to the Directive.
	The examination and test results are	recorded in confidential report nr. LOM 04.221 JP
(9)	- Standards EN 60	th and Safety Requirements has been assured by compliance with: 0079-0:2004 EN 50020:2002 61241-0:2005 EN 61241-1:2004
(10)	If the sign X is placed after the cert conditions for safe use specified in	ificate number, it indicates that the equipment or protective system is subject to special the schedule to this certificate.
(11)	system in accordance with the Direct	ate relates only to the design and construction of this specified equipment or protective tive 94/9/EC. Further requirements of the Directive applies to the manufacture and supply em. These are not covered by this certificate.
(12)	The marking of the equipment or pr	otective system shall include the following:
FOR FOR FOR FOR	(€x) II 2/I D	IP65 T85 °C Ta:-20 /+ 60 °C
	Ex II 1 GD Ex ia IIC T6 / E	ix iaD 20 T85 Ta:-20 /+ 60 °C OFICIAL
COM LOM LOM LOM	A	Madrid, 16th June, 2006 Madrid, 16th June, 2006 MADARIAGA A A A A A A A A A A A A
TOW TOW	Carlos Fernández Ramón DIRECTOR OF THE LABORATO	Angel Vega Remesal Head of ATEX area

(This document may only be reproduced in its entirety and whithout any change)
This Certificate is a translation from the original in Spanish. The LOM liability applies only on the Spanish text


Page 1/3

UNIVERSIDAD POLITÉCNICA DE MADRID ENSAYOS E INVESTIGACIONES DE MATERIALES Y EQUIPOS PARA ATMÓSFERAS EXPLOSIVAS Y MINERIA (Real Decreto 334/1992 de 3 de Abril - BOE 1992-04-29 -)




Alenza, 1 - 28003-MADRID • ☎ (34) 91 4421366/ 91 3367009 • Fax.(34) 91 4419933 • ₺ lom@lom.upm.es

page 18 DT0493

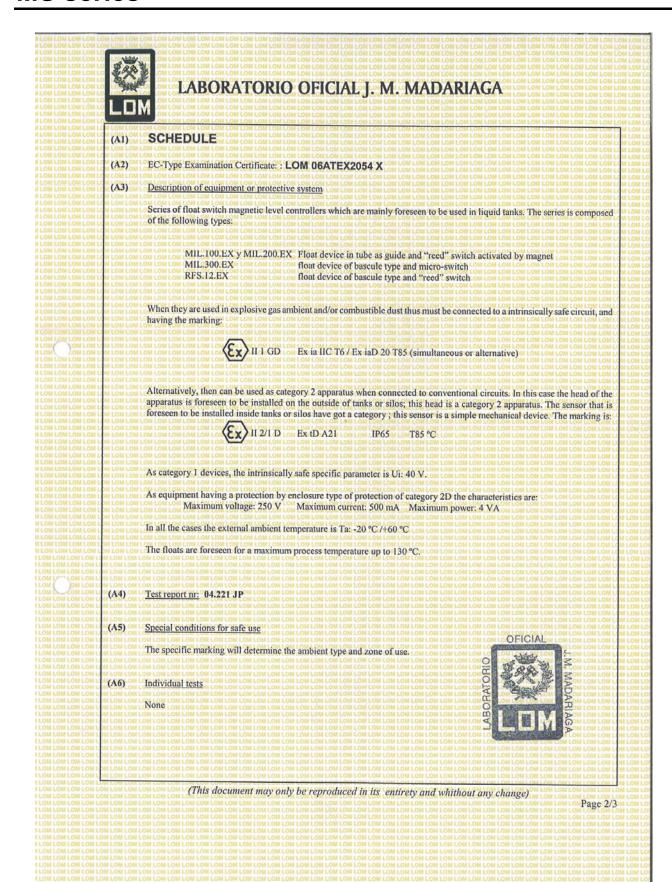

page 19 DT0493

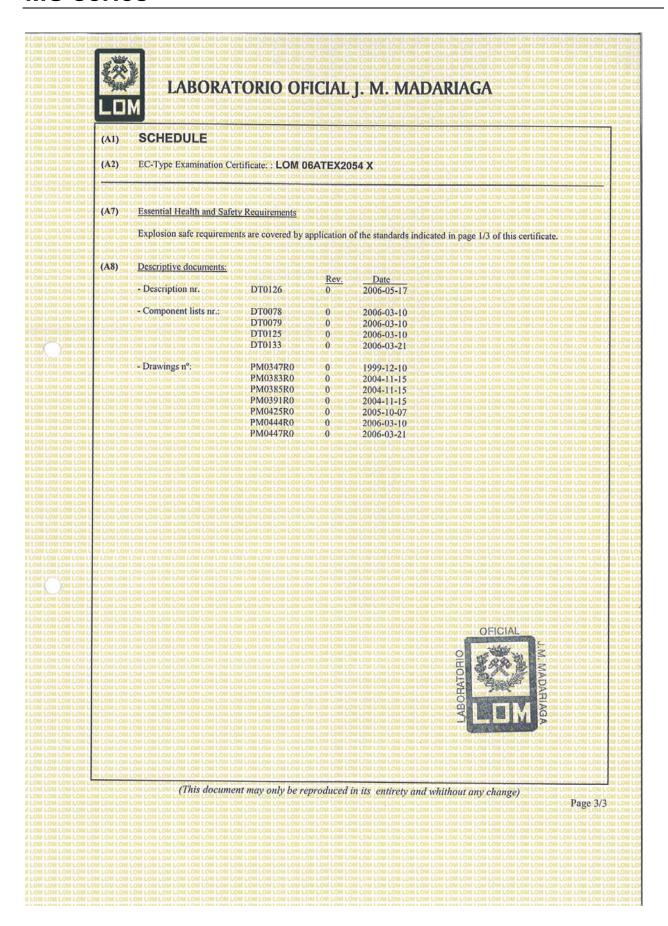

page 20 DT0493



LABORATORIO OFICIAL J. M. MADARIAGA



- Equipment or protective system intended for use in potentially explosive atmospheres (2)
- (3) Supplement nr. 1 to EC-Type Examination Certificate number LOM 06ATEX2054 X

(4) Equipment or Protection System

Level detectors Type MIL... EX and RFS...EX

(5) Applicant

KOBOLD MESURA, S.L.U.

(6) Address Guiffé, 665 08918 BADALONA(BARCELONA)

SPAIN

(7) Report nr. LOM 07.059 NP

- Variations included in this certificate
 - Change of the manufacturer name, before CONTROL INSTRUMENTS MESURA S.L.
 - Update of applied standards to: EN 60079-0:2006, EN 60079-11:2007, EN 61241-0:2006, EN 61241-1:2004 and EN 61241-11:2006
- Marking variations

None

(10)Descriptive documents

- Drawings nr.: DT0132R2

Date

Rev.



Madrid, 24th July, 2007

Angel Vega Remesal Head of ATEX area

This supplement must be an inseparable part together with the base certificate LOM 06ATEX2054 X (This document may only be reproduced in its entirety and without any change)
This Certificate is a translation from the original in Spanish. The LOM liability applies only on the Spanish text

Page 1/1

UNIVERSIDAD POLITÉCNICA DE MADRID ENSAYOS E INVESTIGACIONES DE MATERIALES Y EQUIPOS PARA ATMÓ SFERAS EXPLOSIVAS Y MINERÍA (Real Decreto 334/1992 de 3 de Abril - BOE 1992-04-29 -)

Alenza, 1 - 28003-MADRID • ☎ (34) 91 4421366/ 91 3367009 • Fax.(34) 91 4419933 • ₺ lom@lom.upm.es

page 21 **DT0493**



LABORATORIO OFICIAL J. M. MADARIAGA



LO	EC-TYPE EXAMINATION CERT	IFICATE SUPPLEMENT
N LO	Equipment or protective system intended for use in potential Directive 94/9/EC	ntially explosive atmospheres
M LO	Supplement nr. 2 to EC-Type Examination Certificate	LOM 06ATEX2054 X
M LO	Equipment or protective system	Level detectors Types MIL EX, RFSEX y ME
	Manufacturer ON LOW	KOBOLD MESURA, S.L.U.
	MI COM LON	Guifré, 665 08918 BADALONA(BARCELONA SPAIN
# LO	M LOW	LOM 12.256 KP
10	Variations included in this certificate	LON LON HOM LON HOM HOM LON HOM LON HOM LON LON HOM LO
	tube respectively. May include junction box or direction	E" with intrinsically safe type of protection, with straight or angled ct cable connection or the variants MIL.100.EX, MIL.200.EX and RFS.12.EX
110	Changes in marking Con Lon Lon Lon Lon Lon Lon Lon Lon Lon L	TOW
A LO	All variants used in intrinsically safe circuits	Variant MIL.300.EX used as protection by enclosure type of protection
10 10 10 10	Ex ia II IGD Ex ia IIC T6 Ga Ex ia IIIC T85 °C Da -20 °C ≤ Ta ≤ +60 °C	Ex HIC T85 °C Db -20 °C ≤ Ta ≤ +60 °C
100	Changes in the special conditions for a safe use	TOWN LOWN LOWN LOWN LOWN LOWN LOWN LOWN L
1 LO 1 LO 1 LO 1 LO 1 LO	It is added: - The temperature class or surface temperature refershall be determined on the basis of actual temperature.	rs only to equipment operating at room temperature. In class facility are of the process.
LO	Descriptive documents	FOW TOW TOW TOW TOW TOW TOW TOW TOW TOW T
	- Descriptions nr.: DT0494 -	Date: ON LOW
110	DT0495 DT0496 - DT0496	2012-07 COM LON COM COM LON COM LON COM LON COM LON COM LON
	HE LOW	LOW LOW LOW LOW LOW LOW LOW LOW CON Getafe, 2012-10-22 OW LOW LOW LOW LOW LOW LOW LOW LOW LOW
M LO	M LOM LOM LOM LOM LOM LOM LOM LOM LOM LO	TAL MINISTER STATE OF THE STATE
	M LOM LOM LOW TO TO TON LOW	CHI LON CON LON LON LON LON LON LON LON LON LON L
		S ON TON TON TON TON TON TON TON TON TON
	TO RIO	TANKS PLON LON LON LON LON LON LON LON LON LON
	RATORIO	Angel Vega Remesal
	RATORIO S	Angel Vega Remesal Head of the ATEX

(This document may only be reproduced in its entirety and without any change)

UNIVERSIDAD POLITÉCNICA DE MADRID ENSAYOS E INVESTIGACIONES DE MATERIALES Y EQUIPOS PARA ATMÓSERRAS EXPLOSIVAS Y MINERÍA (Real Decreto 334/1992 de 3 de Abril - BOE 1992-04-29)

Eric Kandel, 1 - 28906 GETAFE (MADRID) • 28 (34) 91 4421366 • 3 (34) 91 4419933 • 10 lom@lom.upm.es

page 22 **DT0493**

MS series

21. Notes

page 23 DT0493

KOBOLD MESURA S.L.U

Avda. Conflent 68 nave 15

08915 Badalona

Tel.: +34 93 460 38 83 Fax: +34 93 460 38 76 E-Mail: info.es@kobold.com

www.kobold.com





