



Operating Instructions for Evaluation Electronics

**Model: ZED-K
and DF-...KLxxx**



1. Contents

| | |
|-------------------------------------------------------------|----|
| 1. Contents..... | 2 |
| 2. Note | 3 |
| 3. Instrument Inspection | 3 |
| 4. Regulation Use | 3 |
| 5. Operating Principle..... | 4 |
| 6. Electrical Connection | 5 |
| 6.1 ZED-K field housing and control panel installation..... | 5 |
| 6.2 DF-...KLxxx, cable connection..... | 5 |
| 6.3 Connection example | 6 |
| 7. Operation and Menu Structure | 7 |
| 7.1 General..... | 7 |
| 7.2 Function of the control keys | 7 |
| 7.3 Character explanation for main menu | 9 |
| 7.4 General settings..... | 9 |
| 7.5 Flow, analogue output and relay S1 | 11 |
| 7.6 Relay S2 | 13 |
| 7.7 User alignment and service-settings | 14 |
| 7.8 Error report | 16 |
| 8. Relay Functions | 17 |
| 8.1 Switching characteristic limit value | 17 |
| 8.2 Switching characteristic window | 17 |
| 9. Technical Information | 18 |
| 10. Order Codes | 18 |
| 11. Dimensions | 18 |
| 12. Disposal | 19 |
| 13. EU Declaration of Conformance | 20 |
| 14. UK Declaration of Conformity..... | 21 |

Manufactured and sold by:

Kobold Messring GmbH
Nordring 22-24
D-65719 Hofheim
Tel.: +49(0)6192-2990
Fax: +49(0)6192-23398
E-Mail: info.de@kobold.com
Internet: www.kobold.com

2. Note

Please read these operating instructions before unpacking and putting the unit into operation. Follow the instructions precisely as described herein.

The instruction manuals on our website www.kobold.com are always for currently manufactured version of our products. Due to technical changes, the instruction manuals available online may not always correspond to the product version you have purchased. If you need an instruction manual that corresponds to the purchased product version, you can request it from us free of charge by email (info.de@kobold.com) in PDF format, specifying the relevant invoice number and serial number. If you wish, the operating instructions can also be sent to you by post in paper form against an applicable postage fee.

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

The devices are only to be used, maintained and serviced by persons familiar with these operating instructions and in accordance with local regulations applying to Health & Safety and prevention of accidents.

When used in machines, the measuring unit should be used only when the machines fulfil the EC-machine guidelines.

3. Instrument Inspection

Instruments are inspected before shipping and sent out in perfect condition. Should damage to a device be visible, we recommend a thorough inspection of the delivery packaging. In case of damage, please inform your parcel service / forwarding agent immediately, since they are responsible for damages during transit.

Scope of delivery:

The standard delivery includes:

- Electronics for measuring and monitoring model: ZED-K and DF-...KLxxx

4. Regulation Use

Any use of the Evaluation Electronics, model: ZED-K and DF-..KLxxx, which exceeds the manufacturer's specification, may invalidate its warranty. Therefore, any resulting damage is not the responsibility of the manufacturer. The user assumes all risk for such usage.

5. Operating Principle

The evaluation unit changes the frequency signal of the pickup into a flow reading and into a scalable analogue signal.

The top display line of the double-spaced display shows the flow value with measuring unit and the bottom line a bargraph indicator proportional to the measuring value.

The two relays with floating output changeover contacts continuously monitor the flow values. Switching point, hysteresis, a window point, and switch on or off delay can be set separately for each relay. The switching points can also be set directly by using the control keys without having to change over into the menu. A red LED indicates the switching status.


The analogue output is optionally available as current output with 0(4)...20 mA or as voltage output with 0...10 V. The menu languages can be switched between German or English. If used where the flow readings change rapidly, the display can be pacified and the analogue reading averaged by switching on some software.

A MIN/MAX reading memory determines the extreme readings of the flow. The display of the readings and the resetting are achieved by using the keys without having to change into the menu. Resetting by using the keys can also be blocked.

The set parameters can be protected against unauthorized alteration by using a password function.

6. Electrical Connection

6.1 ZED-K field housing and control panel installation

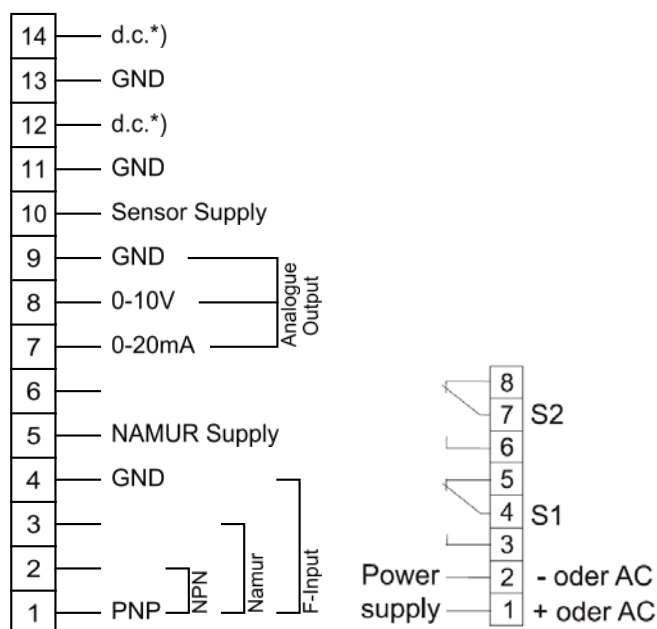

*) Don't connect the clamp!


6.2 DF-...KLxxx, cable connection

| Wire number | ZED-K electronics |
|-------------|---------------------|
| 1 | +24 V _{DC} |
| 2 | GND |
| 3 | 4-20 mA / 0-10 V |
| 4 | GND |
| 5 | S1 N/O |
| 6 | S1 COM |
| 7 | S1 N/C |
| 8 | S2 N/O |
| 9 | S2 COM |
| 10 | S2 N/C |


*) Don't connect the wire!

6.3 Connection example


PNP-Sensor

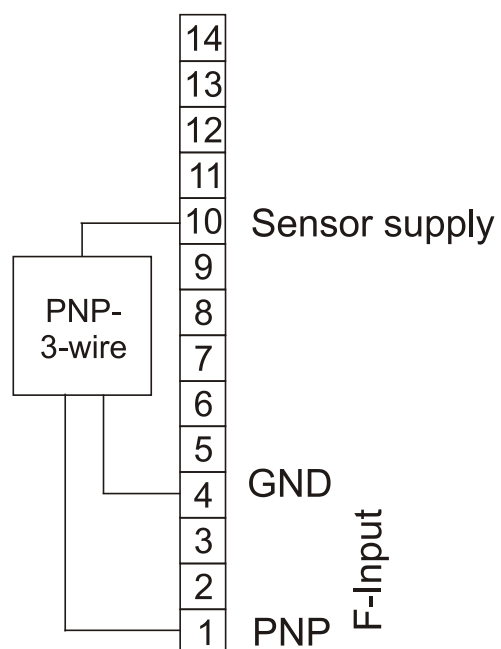

NPN-Sensor

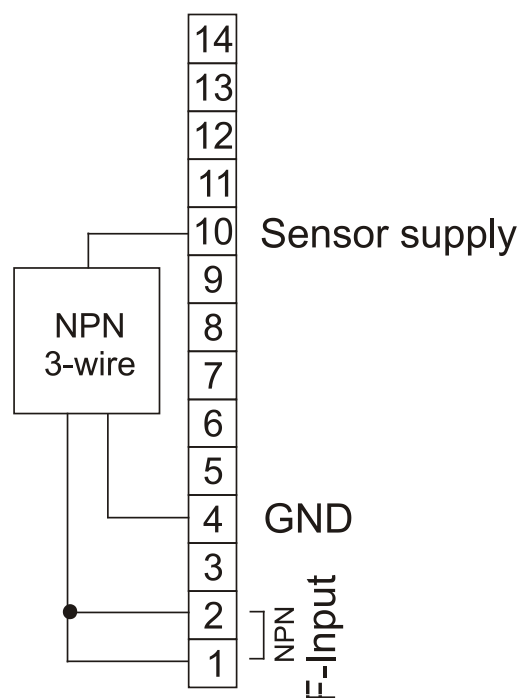

Namur-Sensor

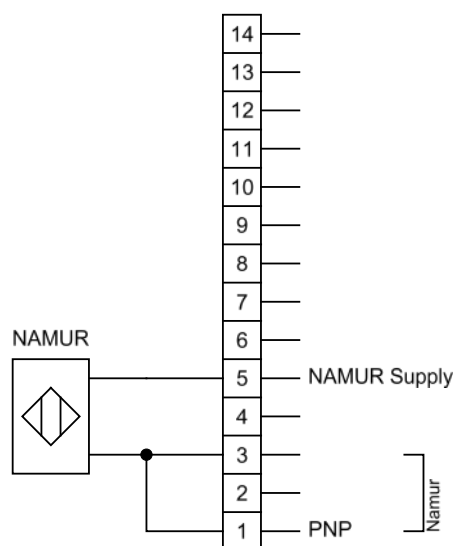

7. Operation and Menu Structure

7.1 General

Only the menu items of which the lines are marked in the selection matrix (in the right position) in grey colour, are available in the respective instrument version.

Italic written values in the menu structure are blinking in the display, if they have been chosen for any input.



The parameter can only be changed, if the security code has been entered correctly! The message „locked“ will appear if the input has not been activated.

7.2 Function of the control keys

Operating mode >Measure< :




- Press briefly: → a) Display total quantity, then
 Display corresponding scale unit or
 → b) Reset status reports.
- Press for 3 sec: → Switch to operating mode >**Parameterise**<.



- Press briefly: → Display min. flow value (MIN value memory).
- Press for 3 sec: → Enter switching point for Relay S1 **s1SPPoint**
 (only if parameter **SPdirect** is set to “yes”).



- Press briefly: → Display max. flow value (MAX value memory).
- Press for 3 sec: → Enter switching point for Relay S2 **s2SPPoint**
 (only when parameter **SPdirect** is switched to “yes”).



Press for 3 sec: → Sets min. and max. value memory to flow value
(only when parameter **fMMReDir** is switched to “yes”).

Operating mode >Parameterize<:



- Press briefly: → a) Open parameter group or
→ b) Change parameter (go lower in menu level) or
→ c) Adopt value input.
- Press for 3 sec: → Abort input and go back one menu level.



- Press briefly: → a) Select parameter group or parameter or
→ b) Reduce selected number by 1 or
→ c) Select list value (e.g.... L/m, L/h, m³/m, ...).




- Press briefly: → a) Select parameter group or parameter or
→ b) Increase selected number by 1 or
→ c) Select list value (e.g.... m³/m, L/h, L/m, ...).



Note: If no button is pressed for 20 seconds during parameterising, the instrument automatically switches back into >measuring< mode.

7.3 Character explanation for main menu

























(e) - Button  press shortly.

(E) - Button  press and hold for approx. 3 seconds.

(▼) - Button  press shortly.

(▲) - Button  press shortly.


7.4 General settings

| | Level 1 Choose parameter-groups | Level 2 Display parameter, choose functions | Level 3 Enter/change values, carry out functions | | DF...KLxxx ZED-K Configuration level ZED-Devices Activation with PW = 6571 |
|---------------------------------|------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Operating Mode > MEASURING < | (E) → ← (E) GENERAL ADJUSTM. (▼) ↓ | (e) → ← (E) Language german (▼) ↓ (▲) ↑ ← (E) fUnitFS m3/h (▼) ↓ (▲) ↑ ← (E) fValueFS 2700m3/h (▼) ↓ (▲) ↑ ← (E) fMinVal 100.0 L/m (▼) ↓ (▲) ↑ ← (E) fPls/rev 3 (▼) ↓ (▲) ↑ ← (E) fJumpvD 5 % (▼) ↓ (▲) ↑ ← (E) fOverflv 100 % (▼) ↓ (▲) ↑ ← (E) fFactor factory (▼) ↓ (▲) ↑ ← (E) UserUnit 115,6271 (▼) ↓ (▲) ↑ ← (E) SPdirect yes | (e) → ← (E) Language english (▼) ↓ (▲) ↑ ← (E) FUnitFS mL/m... (▼) ↓ (▲) ↑ ← (E) VALUE INPUT (▼) ↓ (▲) ↑ ← (E) VALUE INPUT (▼) ↓ (▲) ↑ ← (E) fPls/rev 0... (▼) ↓ (▲) ↑ ← (E) fJumpvD 1 % ... (▼) ↓ (▲) ↑ ← (E) fOverflv 100 % ... (▼) ↓ (▲) ↑ ← (E) fFactor customer (▼) ↓ (▲) ↑ ← (E) VALUE INPUT (▼) ↓ (▲) ↑ ← (E) SP direct no | (▲) → ← (▼) Language german (▼) ↓ (▲) ↑ ← (E) fUnitFS ...GPH (▼) ↓ (▲) ↑ ← (E) VALUE INPUT (▼) ↓ (▲) ↑ ← (E) VALUE INPUT (▼) ↓ (▲) ↑ ← (E) fPls/rev ...10 (▼) ↓ (▲) ↑ ← (E) fJumpvD ... 20 % (▼) ↓ (▲) ↑ ← (E) fOverflv ... 200 % (▼) ↓ (▲) ↑ ← (E) fFactor factory (▼) ↓ (▲) ↑ ← (E) VALUE INPUT (▼) ↓ (▲) ↑ ← (E) SPdirect yes |                         |

| GENERAL SETTINGS | | |
|------------------|----------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Menu Item | Parameter / Function | Explanation / Values / Other |
| Language | Select menu language | German or English |
| fUnitFS * | Measuring unit for flow measurement | mL/s, mL/m, L/s, L/m, L/h, m³/m, m³/h, GPM, GPH, UU/s, UU/m, UU/h |
| fValueFS * | Maximum measuring range value for flow measurement | Range = 0,00...99,9..._100...9999 |
| fMinVal * | Minimum measuring range value for flow measurement | Basis is fValueFS and fUnitFS If the level drops below this, the flow indicator goes to 0. |
| fPIs/rev* | Impulse per sensor wheel revolution | Number of impulses per revolution of the sensor wheel or the like Necessary for long-term period averaging if the readings per revolution vary. The function is switched off when the input value is 1. |
| fJumpVD* | Flow switch value for attenuation cut-off | Value in %, basis is fValueFS and fUnitFS. Attenuation does not function if the switch value is 0%. |
| fOverfIV * | Flow overflow value (overflow) | Value in %, basis is fValueFS and fUnitFS. If exceeded, an M100 report is generated and faded in, alternating with the flow indicator. The report is saved and can be reset by briefly pressing the PGM key. |
| fFactor | Select pulse ration | Selection of works calibration or user calibration. (only for devices Model DF-...ZLxxx and Model-...ExxR) |
| UserUnit. | Special volume unit | Customer-specific special unit UU. The value entered corresponds to the number of litres of the special unit, e.g. in the case of the unit <i>Barrel</i> the factor would for example be 115.6271. |
| SPdirect | Activation of direct input switching point | yes: Direct input of switching points s1SPoint and s2SPoint is possible using the keys (default). no: The switching points can only be set in the menu . |

*) Only for ZED devices: Device-specific parameter, is only visible after activation in the **SecCode** menu item in the **SERVICE** menu group, and can be changed.

7.5 Flow, analogue output and relay S1

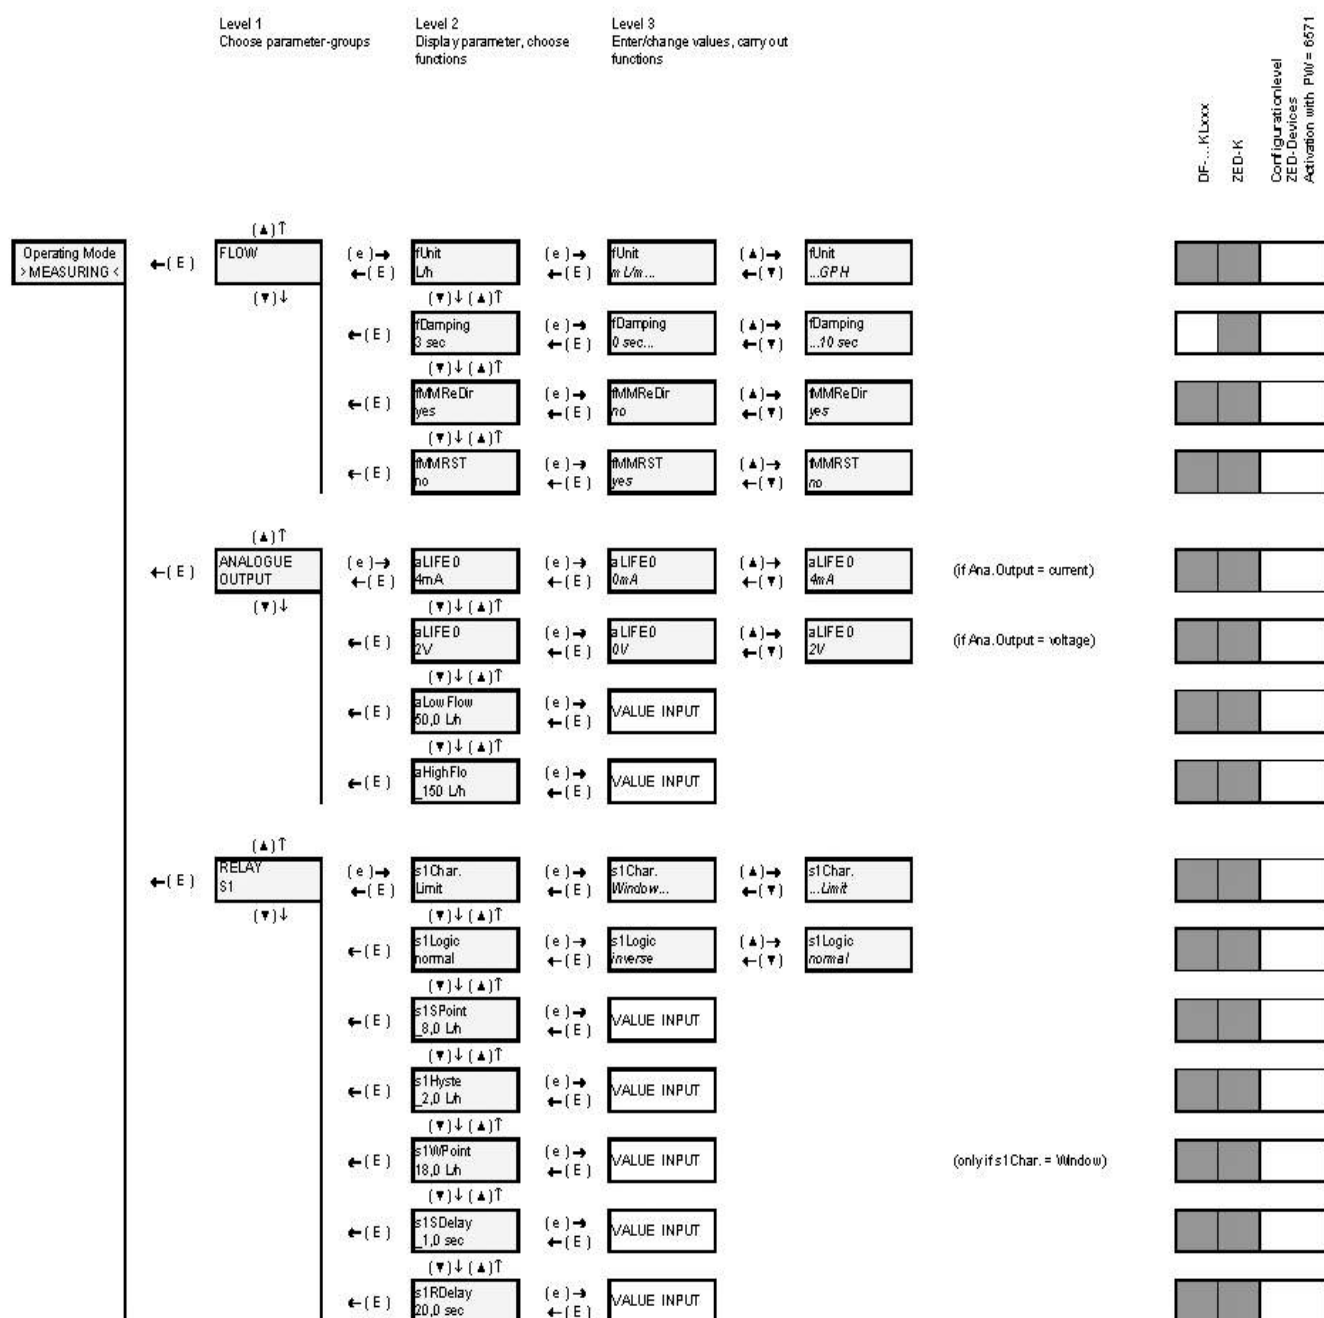


| FLOW | | |
|-----------|------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Menu Item | Parameter / Function | Explanation / Values / Other |
| fUnit | Unit of flow indicator | mL/s, mL/m, L/s, L/m, L/h, m³/m, m³/h, GPM, GPH, UU/s, UU/m, UU/h |
| fDamping | Attenuation of reading fluctuations in the flow indicator | The attenuation pacifies the flow indicator. The attenuation value is the approximate equivalent of the setting time of the display value to c. 90% of a measured value jump in seconds. (Parameter is blocked at DF-...ZLxxx devices). |
| fMMReDir | Reset the Min/Max flow value directly using the keys, without using the menu | yes: direct resetting of the Min/Max value memory by simultaneously pressing (3 sec) the (+) and (-) keys (default). no: memory reset only possible with fMMRST. |
| fMMRST | Reset the Min/Max flow value memory of the flow indicator | yes: Resets Min / Max value memory for the flow no: No action. |

| ANALOGUE OUTPUT | | |
|-----------------|---------------------------------|---------------------------------------------------------------------------------------------------------------|
| Menu Item | Parameter / Function | Explanation / Values / Other |
| aLIFE 0 | Select Life Zero | Offset at power output: 0 mA or 4 mA at 0-10 V \approx 0 mA \rightarrow 0 V and 4 mA \rightarrow 2 V |
| aLowFlow | Flow reading at 0/4 mA or 0/2 V | Lower flow reading of gauged output range, value has the same unit as the flow indicator |
| aHighFlo | Flow reading at 20 mA or 10 V | Upper flow reading of gauged output range, value has the same unit as the flow indicator |


| RELAY S1 | | |
|-----------|------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| Menu Item | Parameter / Function | Explanation / Values / Other |
| s1Char. | Relay1 Switch characteristic | Limit: Monitoring a reading (s1SPoint). Window: Monitoring an adjustable measuring range (s1SPoint...s1FPunkt). |
| s1Logic | Relay1 Switch logic | normal: Relay 1 activated when the limit value is exceeded. invers: Relay 1 drops out when the limit value is exceeded. |
| s1SPoint | Relay1 Switchpoint | Reading is in the same units as the flow indicator. |
| s1Hyste | Relay1 Hysteresis | Reading is in the same units as the flow indicator. |
| s1FPunkt | Relay1 Windowpoint | Reading is in the same units as the flow indicator. (only if s1Char. is set to Window) |
| s1SDelay | Relay1 Switch delay | Delays the switching of the relay when the limit value is exceeded. Range: _ 0,0...99,9 sec |
| s1RDelay | Relay1 Reset delay | Delays the switching of the relay when the limit value is undershot. Range: _ 0,0...99,9 sec |

7.6 Relay S2

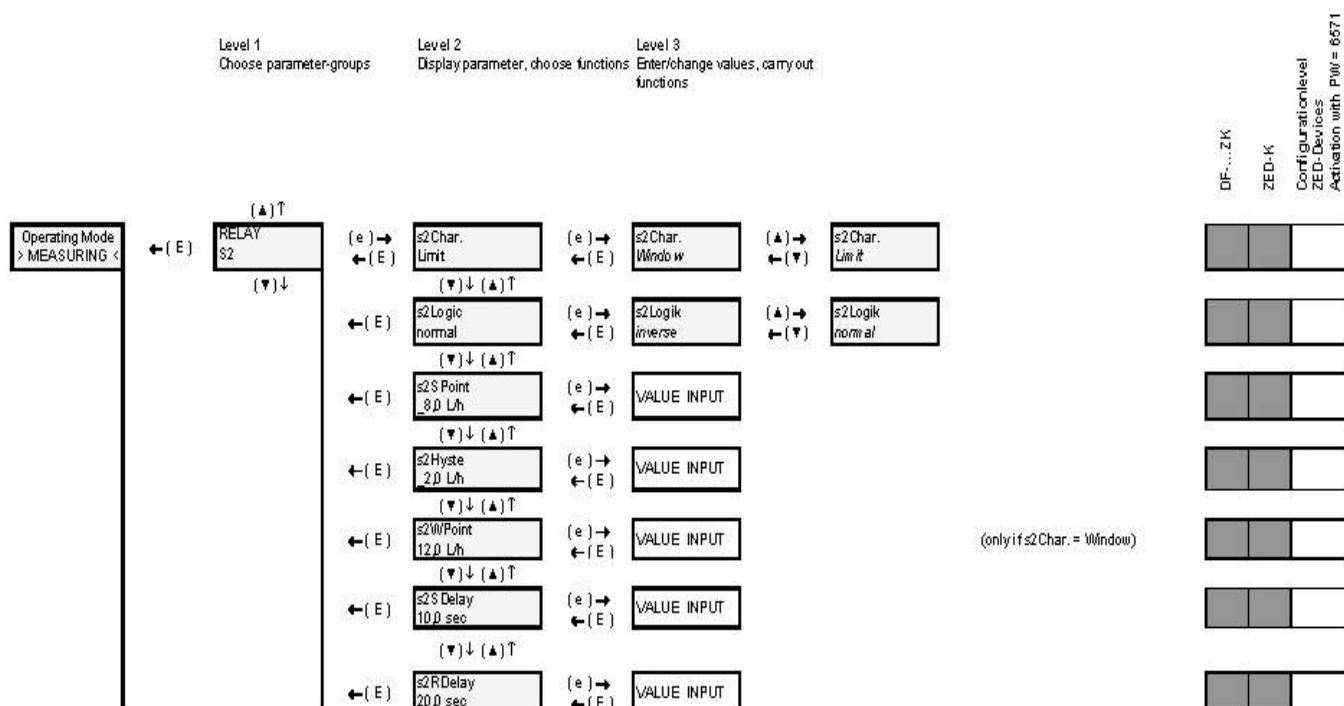

| RELAY S2 | | |
|-----------|------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| Menu Item | Parameter / Function | Explanation / Values / Other |
| s2Char. | Relay2 Switch characteristic | Limit: Monitoring a reading (s2SPoint). Window: Monitoring an adjustable measuring range (s2SPoint...s12punkt). |
| s2Logic | Relay2 Switch logic | normal: Relay 2 activated when the limit value is exceeded. invers: Relay 2 drops out when the limit value is exceeded. |
| s2SPoint | Relay2 Switchpoint | Reading is in the same units as the flow indicator. |
| s2Hyste | Relay2 Hysteresis | Reading is in the same units as the flow indicator. |
| s2FPoint | Relay2 Window point | Reading is in the same units as the flow indicator. (only if s2Char. is set to Window) |
| s2SDelay | Relay2 Switch delay | Delays the switching of the relay when the limit value is exceeded. Range: _ 0,0...99,9 sec |
| s2RDelay | Relay2 Reset delay | Delays the switching of the relay when the limit value is undershot. Range: _ 0,0...99,9 sec |

7.7 User alignment and service-settings

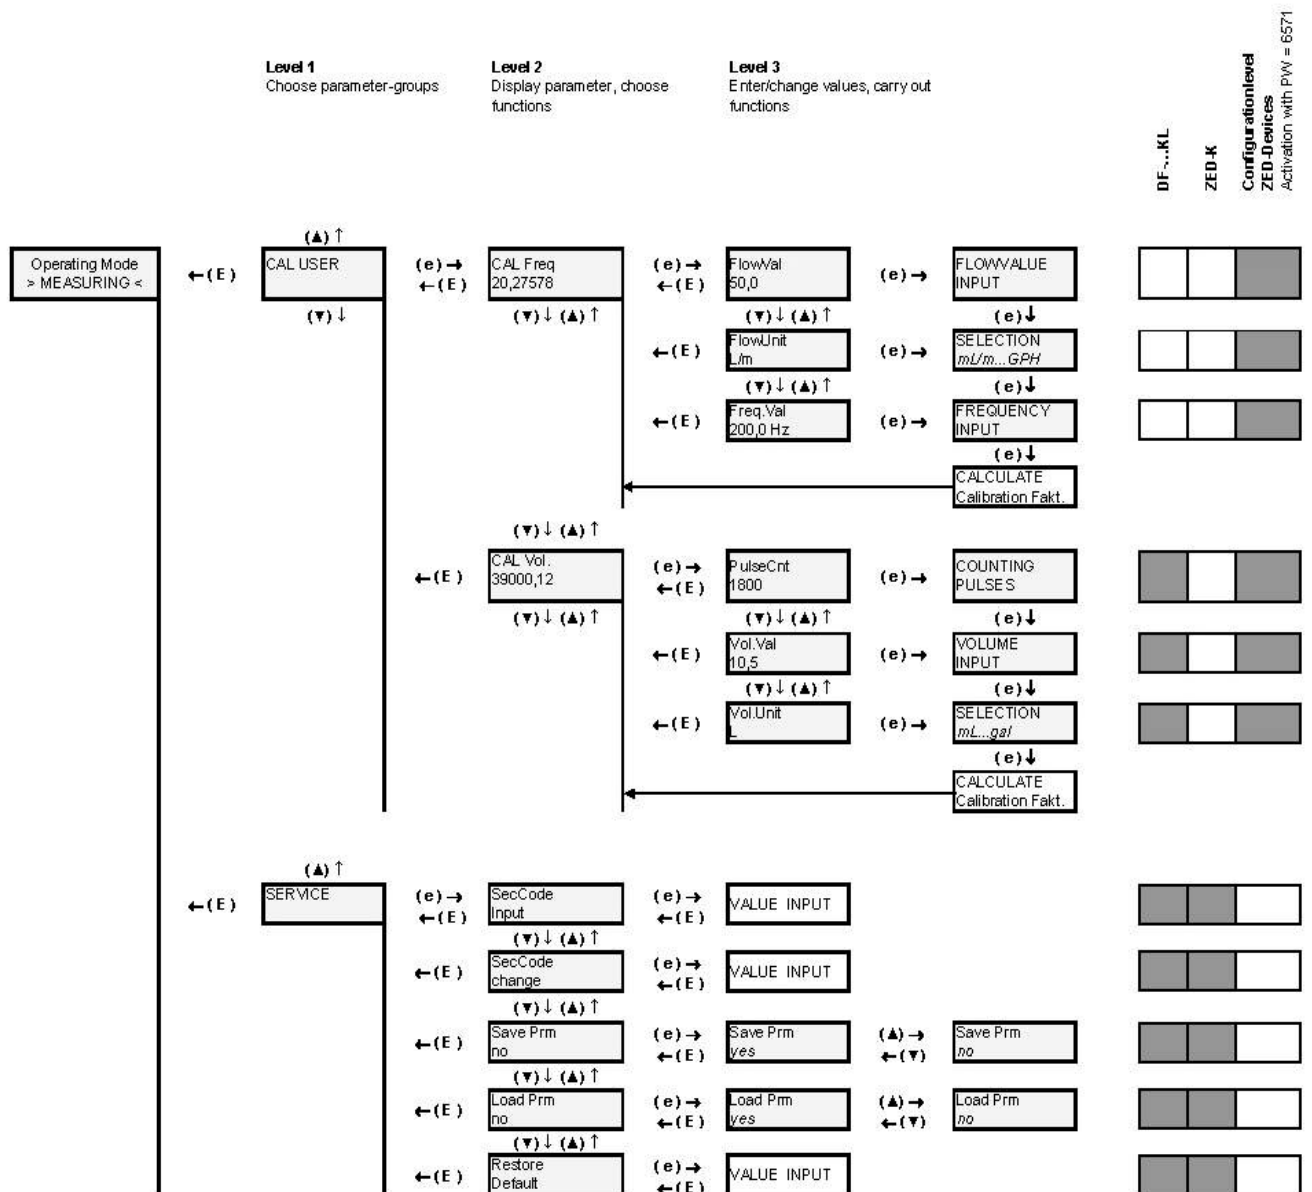

| USER CALIBRATION | |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Menu Item | Function / Description |
| CAL Freq* | <p>Calibrate by entering frequency and flow.</p> <p>In the menu item CAL Freq the bottom line always shows the current pulse value of the User calibration.</p> <p>Calibration process:</p> <ul style="list-style-type: none"> a) FlowVal Enter nominal flow value of the sensor. > (e) press > b) FlowUnit Enter unit for flow value. > (e) press > c) Freq.Val. Enter nominal frequency > finish with (e). <p>The new pulse value of the User calibration is calculated from these three values and saved as user calibration for the flow measurement, e.g. 20.2757 pls./litre.</p> |
| CAL Vol. | <p>Calibration process using impulse counting and volume input (cc procedure).</p> <p>In the menu item CAL Vol. the bottom line always shows the current pulse value of the User calibration.</p> <p>Calibration process:</p> <ul style="list-style-type: none"> a) PulseCnt measures number of impulses (e) press > start counter (impulses are counted) > (e) press > stops counter. b) Vol.Val Enter measured volume value > (e) press. c) Vol.Unit Enter unit for volume value > finish with (e). <p>The pulse value of the User calibration is calculated from these three values and is saved as the user calibration for the flow measurement, e.g. 3900,5 pls./L.</p> |

*) CAL Freq – Only possible with ZED devices.





Note: With ZED devices it is necessary to enable the device-specific parameter input in the menu Item **SecCode** in the menu **SERVICE** in order to activate the **CAL-USER** function.



Note: If the new pulse ratio will be used for measurement, than the menu item **fFaktor** in the menu group **General Settings** must be setted to **USER** calibration.


| SERVICE | | |
|------------------------|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Menu Item | Function | Explanation / Values / Other |
| SecCode Input | Enter security code | Input of 4-digit security code and enablement of the parameter change. The following codes have been defined: 3461 – General menu release 6571 – Activates the device-specific parameters (only ZED and measuring unit as compact version) |
| SecCode change | Change security code | Define or change security code for the first time or change. If no code (= 0000) has been set, then the parameter values set are unsecured! |
| Save Prm | Save parameter record | Save current settings |
| Load Prm | Load parameter record | Restore saved settings (reload). |
| Restore Default | Reset to works default settings | Load initial setting with password 2541. ATTENTION: For ZED-devices the device-specific parameters will be overwritten. An adjustment provided by the customer will be lost in the process. |

7.8 Error report


| Error code | Reason | Reset |
|--------------|--------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E102 | User unit may not be ≤ 0 | Correct parameter |
| E142 | Distance between upper and lower analogue value too small (based on the actual flow) | Correct parameter |
| E 161 | Value is greater than maximum measuring range value. | Correct parameter |
| E162 | Hysteresis too large | Correct parameter |
| E 163 | Window point is lower than switching point. | Correct parameter |
| E242 | Frequency must be between 0,2 and 2000 Hz | Correct parameter |
| E245 | Calculated pulse value out of valid range | Correct parameter |
| E300 | Error memory value of totalising/part counter | Keep  +  pressed about 20 seconds |
| M100 | Overflow | Acknowledge with PGM button |
| #### | Value does not fit in the display | Choose suitable measuring unit |

8. Relay Functions

8.1 Switching characteristic limit value

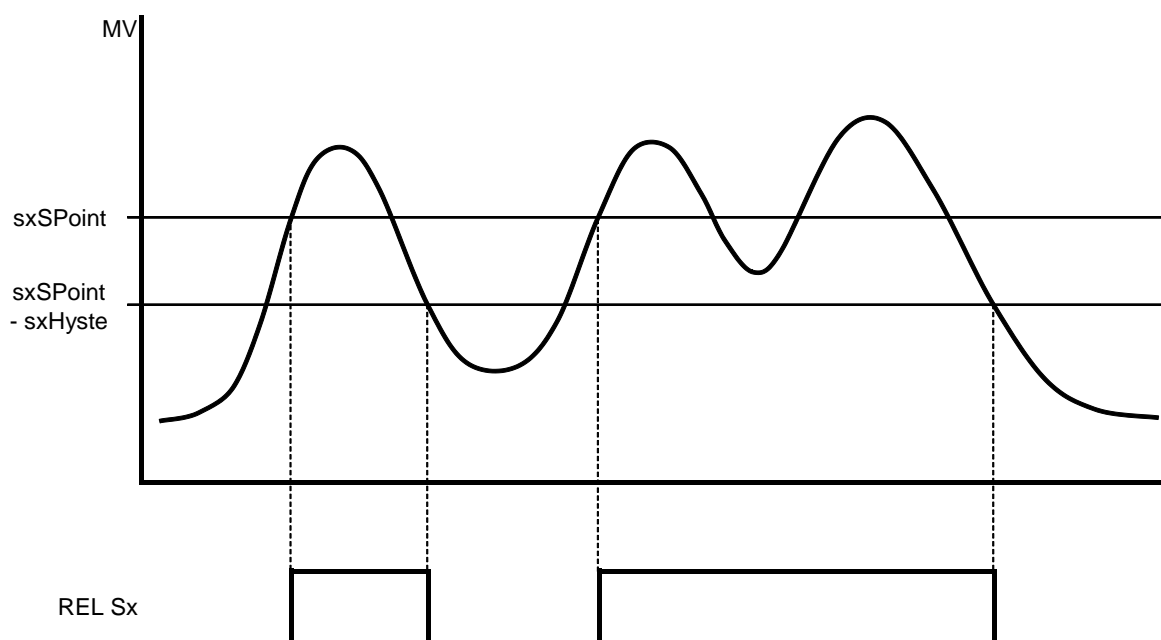

8.2 Switching characteristic window

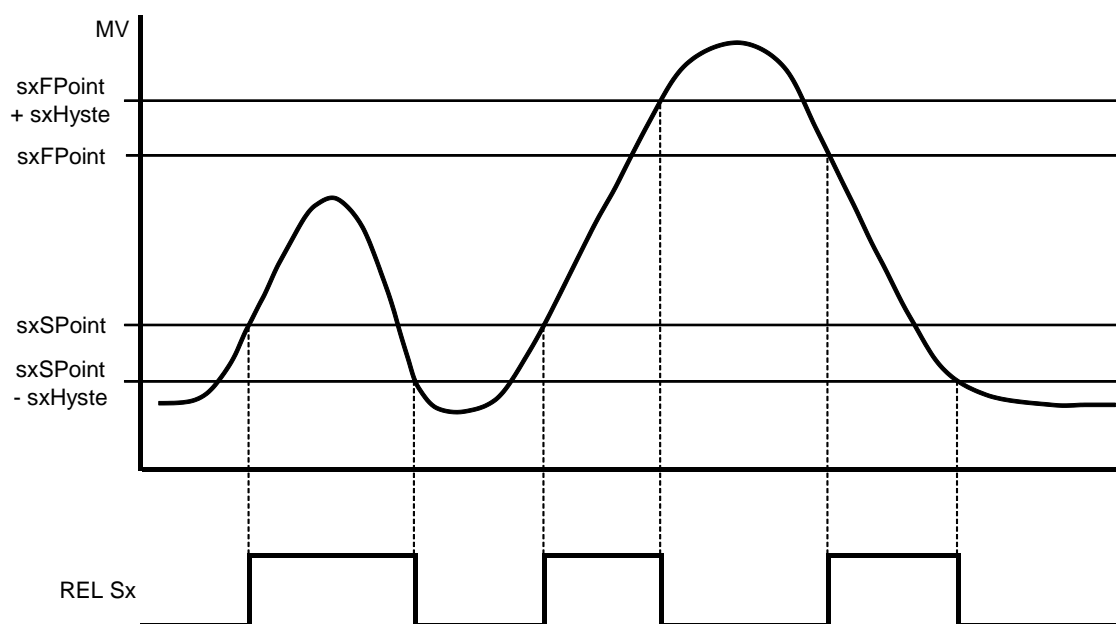

9. Technical Information

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

10. Order Codes

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com

11. Dimensions

Operating instructions, data sheet, approvals and further information via the QR code on the device or via www.kobold.com


12. Disposal

Note!

- Avoid environmental damage caused by media-contaminated parts
- Dispose of the device and packaging in an environmentally friendly manner
- Comply with applicable national and international disposal regulations and environmental regulations.


Batteries

Batteries containing pollutants are marked with a sign consisting of a crossed-out garbage can and the chemical symbol (Cd, Hg, Li or Pb) of the heavy metal that is decisive for the classification as containing pollutants:

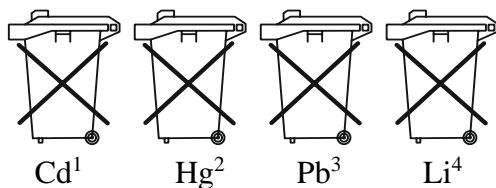

1. „Cd" stands for cadmium
2. „Hg" stands for mercury
3. „Pb" stands for lead
4. „Li" stands for lithium

Electrical and electronic equipment



13. EU Declaration of Conformance

We, KOBOLD Messring GmbH, Hofheim-Ts, Germany, declare under our sole responsibility that the product:

Evaluation Electronics Model: ZED-K and model: DF-...KLxxx

to which this declaration relates is in conformity with the standards noted below:

EN IEC 61326-1:2021

Electrical equipment for control and instrumentation technology and laboratory use – EMC-requirements, industrial area (measurement of interference immunity to HF fields up to 1 GHz)

EN 61010-1:2010 + A1:2019 + A1:2019/AC:2019

Safety requirements for electrical measuring-, control- and laboratory instruments.

EN 60529:2014

Protection type housing (IP-Code)

EN IEC 63000:2018 Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

Also, the following EC guidelines are fulfilled:

2014/30/EU

EMC Directive

2014/35/EU

Low Voltage Directive

2011/65/EU

RoHS (category 9)

2015/863/EU

Delegated Directive (RoHS III)



Hofheim, 05 May 2023

H. Volz
General Manager



M. Wenzel
Proxy Holder

14. UK Declaration of Conformity

We, KOBOLD Messring GmbH, Hofheim-Ts, Germany, declare under our sole responsibility that the product:

Dosing Electronic Model: ZED-K and model: DF-...KLxxx

to which this declaration relates is in conformity with the standards noted below:

BS EN IEC 61326-1:2021

Electrical equipment for measurement, control and laboratory use. EMC requirements. General requirements, industrial area (measurement of interference immunity to HF fields up to 1 GHz)

BS EN 61010-1:2010+A1:2019

Safety requirements for electrical equipment for measurement, control, and laboratory use. General requirements

BS EN 60529:1992+A2:2013

Degrees of protection provided by enclosures (IP-Code)

BS EN IEC 63000:2018

Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances.

Also, the following UK guidelines are fulfilled:

S.I. 2016/1091

S.I. 2016/1101

S.I. 2012/3032

Electromagnetic Compatibility Regulations 2016

Electrical Equipment (Safety) Regulations 2016

The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

Hofheim, 05 May 2023

H. Volz
General Manager

M. Wenzel
Proxy Holder