



**Operating Instructions**  
**for**  
**Thermal Flow Meter for bi-directional**  
**measurements**

**Model: KEP-2**

# KEP-2 bi-directional

---

We don't accept warranty and liability claims neither upon this publication nor in case of improper treatment of the described products.

The document may contain technical inaccuracies and typographical errors. The content will be revised on a regular basis. These changes will be implemented in later versions. The described products can be improved and changed at any time without prior notice.

© **Copyright**

**All rights reserved.**

## 1. Contents

---

1. Contents.....	2
2. Note .....	4
3. Instrument Inspection.....	4
4. Regulation Use .....	5
5. Operating Principle.....	6
6. Safety instructions .....	6
7. Scaling Analogue output Compressed Air.....	8
8. Installation Description.....	9
8.1 Pipe/tube requirements.....	9
8.2 Inlet / outlet runs .....	9
8.3 Installation of KEP-2 .....	10
8.4 Displayhead Position .....	10
9. Flow measuring ranges .....	11
9.1 Flow for different gases .....	11
10. Electrical wiring .....	12
10.1 Modbus RTU, 4...20mA, Pulse.....	12
10.2 Connection diagrams.....	13
11. Operation .....	14
11.1 Initialization .....	14
11.2 Main menu .....	15
11.3 Settings.....	16
12. Status / Error messages.....	35
12.1 Status messages .....	35
12.2 Error messages .....	35
13. Maintenance .....	36
14. Cleaning of the sensor head .....	36
15. Re-Calibration .....	37
16. Spare parts and repair .....	37
17. Calibration.....	37
18. Warranty .....	37
19. Technical Information.....	38
20. Order Codes .....	38
21. Dimensions .....	38

22. Disposal .....	39
23. EU Declaration of Conformance .....	40

**Manufactured and sold by:**

Kobold Messring GmbH  
Nordring 22-24  
D-65719 Hofheim  
Tel.: +49(0)6192-2990  
Fax: +49(0)6192-23398  
E-Mail: [info.de@kobold.com](mailto:info.de@kobold.com)  
Internet: [www.kobold.com](http://www.kobold.com)

# KEP-2 bi-directional

---

## 2. Note

---

Please read these operating instructions before unpacking and putting the unit into operation. Follow the instructions precisely as described herein.

The instruction manuals on our website [www.kobold.com](http://www.kobold.com) are always for currently manufactured version of our products. Due to technical changes, the instruction manuals available online may not always correspond to the product version you have purchased. If you need an instruction manual that corresponds to the purchased product version, you can request it from us free of charge by email ([info.de@kobold.com](mailto:info.de@kobold.com)) in PDF format, specifying the relevant invoice number and serial number. If you wish, the operating instructions can also be sent to you by post in paper form against an applicable postage fee.

Operating instructions, data sheet, approvals and further information via the QR code on the device or via [www.kobold.com](http://www.kobold.com)

The devices are only to be used, maintained and serviced by persons familiar with these operating instructions and in accordance with local regulations applying to Health & Safety and prevention of accidents.

When used in machines, the measuring unit should be used only when the machines fulfil the EC machinery directive.

## 3. Instrument Inspection

---

Instruments are inspected before shipping and sent out in perfect condition.

Should damage to a device be visible, we recommend a thorough inspection of the delivery packaging. In case of damage, please inform your parcel service / forwarding agent immediately, since they are responsible for damages during transit.

### **Scope of delivery:**

The standard delivery includes:

- Thermal Flow Meter for bi-directional measurements Model: KEP-2

### 4. Regulation Use

---

Any use of the device, which exceeds the manufacturer's specification, may invalidate its warranty. Therefore, any resulting damage is not the responsibility of the manufacturer. The user assumes all risk for such usage.

The KEP-2 consumption sensor for bi-directional measurements is used for continuous flow measurement in both directions.

The KEP-2 consumption sensor for bi-directional measurements is designed and constructed exclusively for the intended purpose described here and may only be used accordingly.

The user must check whether the instrument is suitable for the selected application. It must be ensured that the medium is compatible with the wetted parts. The technical data listed in the data sheet are binding.

Improper handling or operation outside the technical specifications is not permitted. Claims of any kind based on improper use are excluded.

**Operating principle:**

The KEP-2 consumption probe operates according to the calorimetric measuring method.

The basis of this measuring method is the electrical heating of the mechanically protected built-in sensor. The mass flow, the volume flow and the flow velocity can be measured and determined by the resulting heat flow to the passing medium (gas).

With the calorimetric measurement method (based on the measurement principle), the operating temperature and pressure of the medium have no influence on the measurement result, only the material data of the gas component are decisive.

The integrated flow direction recognition allows the bi-directional flow measurement with display of the flow values. The flow direction is indicated by arrows in blue and green.

A meter reading is available for each flow direction, displayed in the colours blue and green according to flow direction.

# KEP-2 bi-directional

---

## 5. Operating Principle

---

The KEP-2 is a compact consumption counter for compressed air and gases.

### Special features:

- Optimum accuracy due to compact design
- Integrated Display showing Flow, consumption, velocity and temperature for two directions
- Input inner tube diameter via display keys
- Units free selectable. m<sup>3</sup>/h, m<sup>3</sup>/min, l/min, l/s, kg/h, kg/min, kg/s, cfm
- Modbus RTU (RS485) Interface
- 2x Analogoutput 4...20 mA
- 2x Pulse output galv. isolated

### Service Software

- Analogue output 4...20 mA scaleable
- Selection of gas type (Air, Nitrogen, Argon, Nitrous oxide, CO<sub>2</sub>, Oxygen, Natural gas)
- Read out Service data
- Sensordiagnoses

## 6. Safety instructions

---



**Read this manual carefully before installing the VA 520. If the instructions given in this manual, in particular the safety instructions, are not observed, this may result in hazards for people, equipment and plants**

---

### **Please read carefully before starting the device!**

Warning: Do not exceed the pressure range of 16 bar!

Observe the measuring range of the sensor!

The screwed fixture must be pressure tight.

It is absolutely necessary to avoid condensation on the sensor element or water drops in the measuring air as they may cause faulty measuring results.

The manufacturer cannot be held liable for any damage which occurs as a result of non-observance or non-compliance with these instructions. Should the device be tampered with in any manner other than a procedure which is described and specified in the manual, the warranty is cancelled and the manufacturer is exempt from liability.

The device is destined exclusively for the described application.

We offer no guarantee for the suitability for any other purpose and are not liable for errors which may have slipped into this operation manual. We are also not liable for consequential damage resulting from the delivery, capability or use of this device.

We offer you to take back the instruments of the instrument's family KEP-2 which you would like to dispose of.

Qualified employees from the measurement and control technology branch should only carry out adjustments and calibrations.

### **Flammable gases**

If this consumption sensor is used for measurement of flammable gases (e. g. natural gas and so on) we expressly would like to point out that the sensor has no DVGW admission, however, it can be used for measurements in natural gas. A DVGW admission is not mandatory.

The consumption sensor corresponds with the current state of technology and basically it can be used in any flammable and non-flammable gases.

If the sensor is used e.g. in the medium natural gas, the sensor will be adjusted for natural gas. The calibration protocol (inspection certificate) will be included in the scope of delivery.

The area outside the pipeline (ambient area of the sensor) must not be an explosive area.

The installation has to be carried out by authorized professionals.

# KEP-2 bi-directional

## 7. Scaling Analogue output Compressed Air

Reference DIN1945/ ISO 1217: 20°C, 1000 mbar (Reference during calibration)

Description	Version	Analogue output	
KEP-2 with integrated ¼" meas. section	Low Speed	4...20 mA =	0...25 l/min
	Standard		0...50 l/min
	Max		0...105 l/min
	High Speed		0...130 l/min
KEP-2 with integrated ½" meas. section	Low Speed	4...20 mA =	0...20 m³/h
	Standard		0...45 m³/h
	Max		0...90 m³/h
	High Speed		0...110 m³/h
KEP-2 with integrated ¾" meas. section	Low Speed	4...20 mA =	0...45 m³/h
	Standard		0...85 m³/h
	Max		0...175 m³/h
	High Speed		0...215 m³/h
KEP-2 with integrated 1" meas. section	Low Speed	4...20 mA =	0...75 m³/h
	Standard		0...145 m³/h
	Max		0...290 m³/h
	High Speed		0...355 m³/h
KEP-2 with integrated 1¼" meas. section	Low Speed	4...20 mA =	0...140 m³/h
	Standard		0...265 m³/h
	Max		0...530 m³/h
	High Speed		0...640 m³/h
KEP-2 with integrated 1½" meas. section	Low Speed	4...20 mA =	0...195 m³/h
	Standard		0...365 m³/h
	Max		0...730 m³/h
	High Speed		0...885 m³/h
KEP-2 with integrated 2" meas. section	Low Speed	4...20 mA =	0...320 m³/h
	Standard		0...600 m³/h
	Max		0...1195 m³/h
	High Speed		0...1450 m³/h
KEP-2 with integrated 2½" meas. section	Low Speed	4...20 mA =	0...550 m³/h
	Standard		0...1025 m³/h
	Max		0...2050 m³/h
	High Speed		0...2480 m³/h
KEP-2 with integrated 3" meas. section	Low Speed	4...20 mA =	0...765 m³/h
	Standard		0...1420 m³/h
	Max		0...2840 m³/h
	High Speed		0...3440 m³/h



## 8. Installation Description

### 8.1 Pipe/tube requirements


- Correctly sized gaskets
- Correct aligned flanges and gaskets
- Diameter mismatch at the pipe junctions should be avoided but must be less than 1 mm. For further information see ISO 14511
- Ensure clean pipes after installation

### 8.2 Inlet / outlet runs

The principle of thermal Mass flow measurement is very sensitive against disturbances. Therefore, it is necessary to ensure the recommended inlet and outlet runs.

Table of additionally required inlet sections.

Flow obstruction <b>in front of</b> the measuring section	Minimum length inlet section (L1)
Slight curve (bend < 90°)	<b>12 x D</b>
Reduction (pipe narrows towards the meas. section)	<b>15 x D</b>
Expansion (pipe expands towards the meas. section)	<b>15 x D</b>
90° bend or T-piece	<b>15 x D</b>
2 bends á 90° on one level	<b>20 x D</b>
2 bends á 90° 3-dimensional change of direction	<b>35 x D</b>
Shut-off valve	<b>45 x D</b>

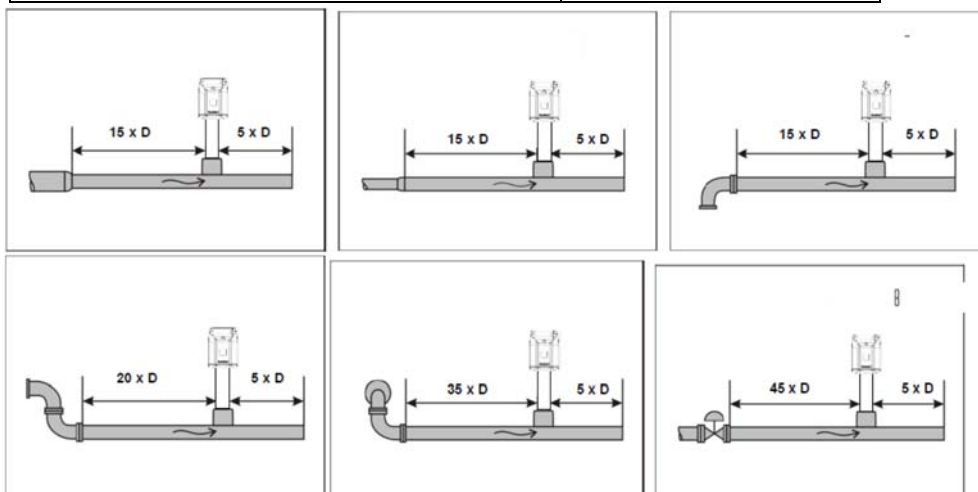

# KEP-2 bi-directional

---

The respective minimum values required are indicated here. If it is not possible to observe the stipulated equalising sections, considerable deviations in the measuring results must be expected.

**Attention:**

The dimensions of the KEP-2 consumption counter measuring sections do not fulfill the required minimum lengths of the input and outlet runs.

Please ensure recommended in- and outlet distances, dimensions for measuring sections see datasheet.

## 8.3 Installation of KEP-2

The sensor KEP-2 is pre-supplied with the measuring section.




---

An installation at customer site is only allowed in the unpressurized state of the system.

The connecting nut is tightened to a torque of 25-30 Nm. Tightness of the connection must be checked and ensured.

---

## 8.4 Displayhead Position

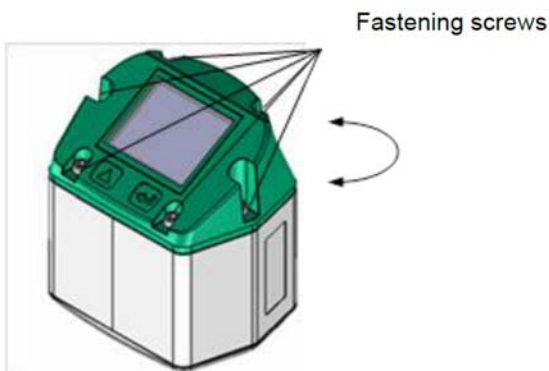

The Position of the display head is twistable by 180 e.g. in case of reverse flow direction.

For this purpose, the 6 fastening screws are to be released and the display head rotated 180°.

**Caution:**

It must be ensured that the connection plugs are still plugged and the gasket is installed correctly.

## 9. Flow measuring ranges

### 9.1 Flow for different gases

	1/4"	1/2"	3/4"	1"	1 1/4"	1 1/2"	2"	2 1/2"	3"
	Analog output 20mA	Analog output 20mA	Analog output 20mA	Analog output 20mA	Analog output 20mA	Analog output 20mA	Analog output 20mA	Analog output 20mA	Analog output 20mA
	l/min	[m <sup>3</sup> /h]	[m <sup>3</sup> /h]	[m <sup>3</sup> /h]	[m <sup>3</sup> /h]	[m <sup>3</sup> /h]	[m <sup>3</sup> /h]	[m <sup>3</sup> /h]	[m <sup>3</sup> /h]

**Reference DIN1945/ ISO 1217: 20°C, 1000 mbar (Reference during calibration)**

Air	Low Speed	25	20	45	75	140	195	320	550	765
	Standard	50	45	85	145	265	365	600	1025	1420
	Max	105	90	175	290	530	730	1195	2050	2840
	High Speed	130	110	215	355	640	885	1450	2480	3440

**Adjustment to DIN 1343: 0°C, 1013,25 mbar**

Air	Low Speed	25	20	40	70	130	180	295	505	705
	Standard	50	40	80	135	240	335	550	945	1305
	Max	100	80	160	270	485	670	1100	1885	2610
	High Speed	120	100	195	325	590	815	1330	2280	3165
Argon (Ar)	Low Speed	45	35	75	120	220	305	505	865	1200
	Standard	85	70	135	230	415	570	935	1605	2225
	Max	170	140	275	460	830	1140	1870	3205	4440
	High Speed	205	170	335	555	1005	1385	2265	3880	5380
Carbon dioxide (CO <sub>2</sub> )	Low Speed	25	20	45	75	140	195	320	545	760
	Standard	50	45	85	145	260	360	590	1015	1405
	Max	105	90	175	290	525	720	1185	2030	2810
	High Speed	130	105	210	350	635	875	1430	2455	3405
Nitrogen (N <sub>2</sub> )	Low Speed	25	20	40	70	130	180	295	505	705
	Standard	50	40	80	135	240	335	550	945	1305
	Max	100	80	160	270	485	670	1100	1885	2610
	High Speed	120	100	195	325	590	815	1330	2280	3165
Oxygen f (O <sub>2</sub> )	Low Speed	25	20	45	75	135	185	305	525	730
	Standard	50	40	80	140	250	345	570	980	1355
	Max	100	85	165	280	505	695	1140	1955	2710
	High Speed	125	105	205	340	610	845	1380	2365	3280
Nitrous oxide (N <sub>2</sub> O)	Low Speed	25	20	45	75	140	190	315	540	750
	Standard	50	40	85	140	260	355	585	1005	1395
	Max	105	85	170	285	520	715	1170	2010	2785
	High Speed	125	105	210	345	630	865	1420	2435	3375
Natural gas (NG)	Low Speed	15	15	25	45	85	115	190	325	450
	Standard	30	25	50	85	155	215	355	605	840
	Max	60	50	105	170	310	430	705	1210	1680
	High Speed	75	65	125	210	380	520	855	1465	2035

Other gases on request

# KEP-2 bi-directional

**Please note:**


The consumption sensor corresponds with the current state of technology and basically it can be used in any flammable and non-flammable gases.

If this consumption sensor is used for measurement of flammable gases (e.g. natural gas and so on) we expressly would like to point out that the sensor has no DVGW admission, however, it can be used for measurements in natural gas. A DVGW admission is not mandatory.

The area outside the pipeline (ambient area of the sensor) must not be an explosive area.

## 10. Electrical wiring

### 10.1 Modbus RTU, 4...20mA, Pulse

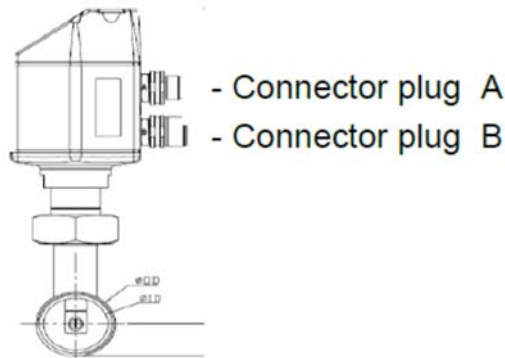

**Attention:** Not required connections NC must not be connected to a voltage and/or to protection earth. Cut and insulate cables.


	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5
<b>Connector plug A</b>	+VB	RS 485 (A) RS 485 (+)	-VB	RS 485 (B) RS 485 (-)	I+ (ch1) 4..20 mA
<b>Connector plug B</b> Pulse output (standard)	I+ (ch2) 4..20 mA	Pulse (ch2) galv. isolated	Pulse (ch2) galv. isolated	Pulse (ch1) galv. isolated	Pulse (ch1) galv. isolated
Colours pulse cables 0553 0106 (5 m) 0553.0107 (10 m)	brown	white	blue	black	grey

Legend:

-VB	Negative supply voltage 0 V
+VB	Positive supply voltage 18...36 VDC smoothed
I +	Current signal 4...20 mA – selected measured signal
RS 485 (A) RS 485 (B)	Modbus RTU A / Modbus RTU (+) Modbus RTU B / Modbus

Pulse	Pulse for consumption
NC	Must not be connected to a voltage and/or to protection earth. Please cut and isolate cables.


If no connection cable/ pulse cable is ordered the sensor will be supplied with a M12 connector plug. The user can connect the supply and signal cables as indicated in the connection diagram.

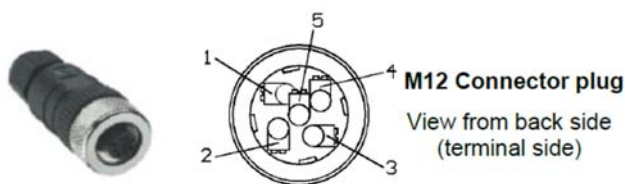

## 10.2 Connection diagrams

### 10.2.1 Modbus

#### Connector plug A (M12 - A-coding)

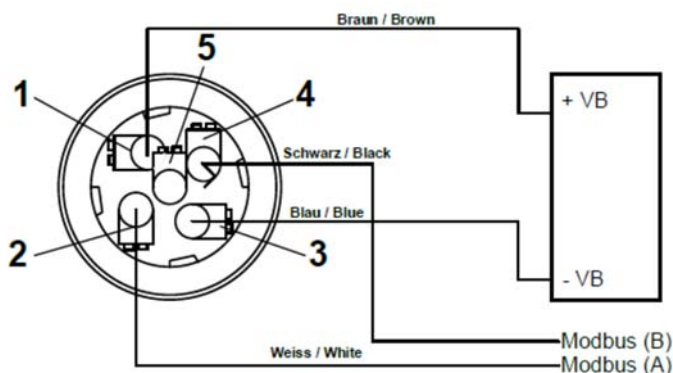


**Remark:** If the sensor is placed at the end of the Modbus system a termination is required. The sensors have an internal switchable termination, therefore the 6 fastening screws from the lid are to be released and set the internal DIP Switch to “On”. It must be ensured that the connection plugs are still plugged and the gasket is installed correctly. Alternatively, a 120R resistor can be installed in the plug between pin 2 and pin 4.

# KEP-2 bi-directional


## 10.2.2 Analogue output (4-20mA, Pulse)

Connector plug A (M12 A-coding)

Connector plug B (M12 A-coding)

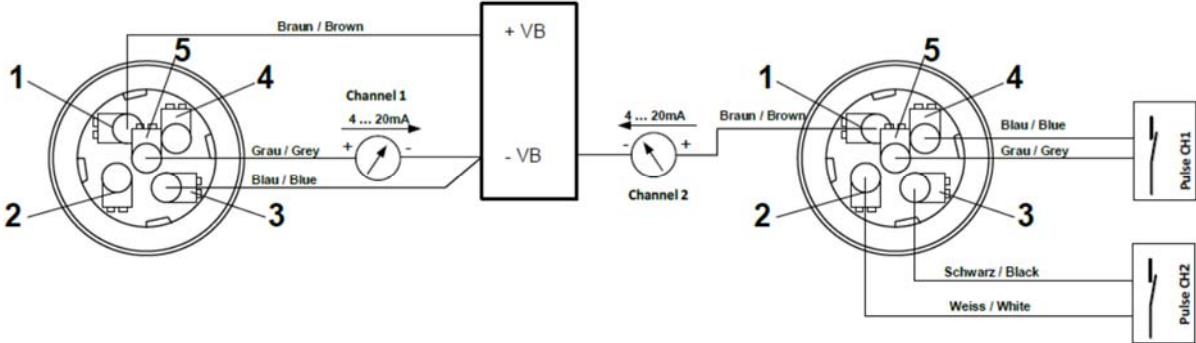


# 11. Operation

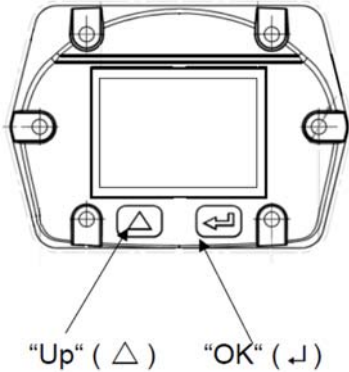


The operation of the KEP-2 is done by the two capacitive key buttons Up (Δ) and Enter (∇)

## 11.1 Initialization

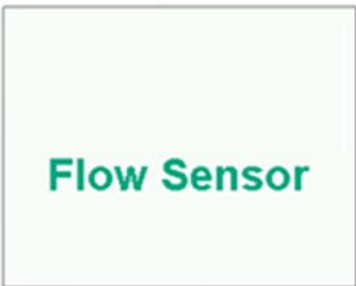

After switching on the KEP-2, the initialized screen is displayed followed by the main menu.

## 11.2 Main menu

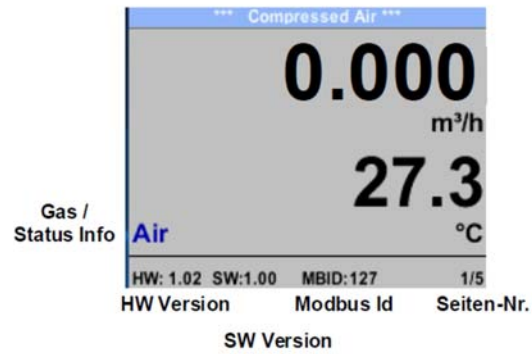


Switching to pages 2-5 or back by pressing key „Δ“.



Counter Direction green


Counter direction blue

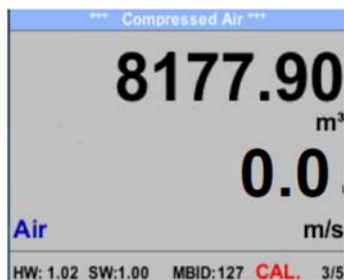

Total counter


Actual flow

# KEP-2 bi-directional

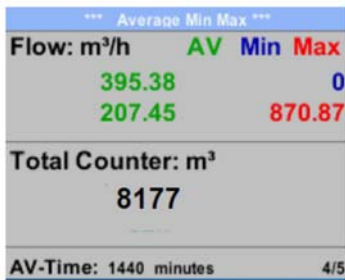

Flow direction blue ( Average, max. Value)  
Flow direction green( Average, max. Value)

Total counter

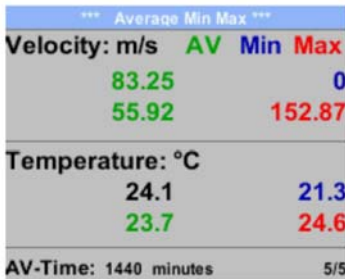

Velocity. Direction blue (Average, max. Value)  
Velocity. Direction green (Average, max. Value)

Temperature Medium (actual and min. value)  
Temperature Medium (Average and max. value)

AV-Time (Period for average value calculation) could be changed under Sensor Setup.-Advanced- AV-Time


## 11.3 Settings

The settings menu could be accessed by pressing the key „OK“. But the access to the *settings menu* is password protected.



Factory settings for password at the time of delivery: 0000 (4 times zero).


If required the password could be changed at *Setup-User setup-Password.*

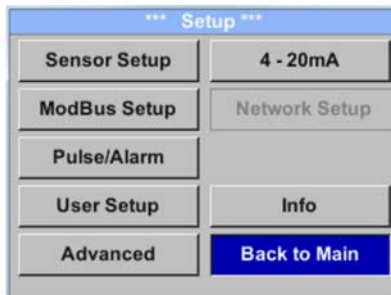

Selection of a menu item or to change a value is done with the key „ $\Delta$ “, a final move to the chosen menu item or takeover of the value change needs the confirmation by pressing the key „OK“



## 11.3.1 Sensor Setup *Setup* → *Sensor Setup*

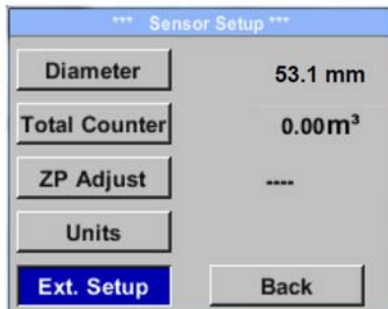

For changes, first select the menu item with key „Δ “ and then confirm it with “OK”.

### 11.3.1.1 Input / change tube diameter

For KEP-2 not adjustable (suspended) as voted on included measuring section with corresponding pipe diameter.


### 11.3.1.2 Input / change consumption counter *Setup* → *Sensor Setup* → *Total Counter*



For changing one or both counter please select by pressing key „Δ “ the corresponding counter-button then confirm it with key “OK”.

# KEP-2 bi-directional

Setup → Sensor Setup → Total Counter → Unit button

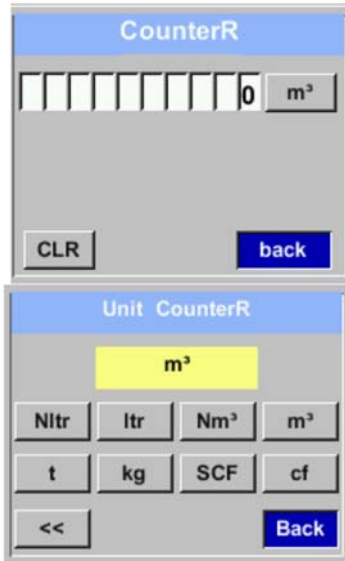

In order to change, e.g. the unit, first select by pressing key „Δ“ the button **“Unit”** and then key **“OK”**.

Select with the key „Δ“ the correct unit and then confirm selection by pressing 2x **„OK”**.

Entering / changing the consumption counter via button „Δ“, select the respective position and activate the position with the **“OK”** button.

By pressing „Δ“ the position value is incremented by 1. Complete with **“OK”** and activate next number position.


Confirm entry by pressing **„OK”**.

With **„CLR”** the counter will be reset to zero

## Important!

When the counter reach 10000000 m³ the counter will be reset to zero.

### 11.3.1.3 Definition of the units for flow, velocity, temperature and pressure Setup → Sensor Setup → Units

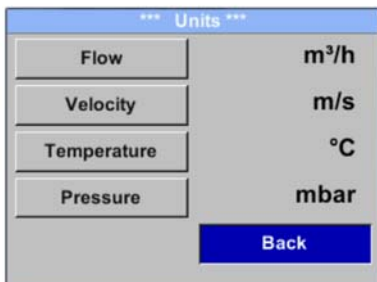


To make changes to the unit for the respective measurement value, first select by pressing „Δ“ the field of the „measurement value“ and activate „it with **„OK”** .

Selection of the new unit with **„Δ”**

In case the quantity of units selectable are not presentable on one page, pleas move to next page by pressing **„<<”** .


Confirm selection by pressing 2x **„OK”**.

Procedure for all 4 measurement variables is analogous.

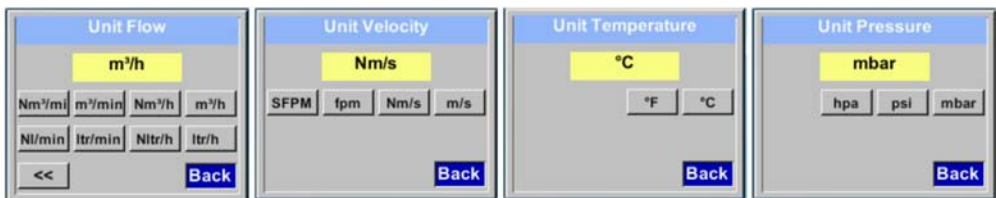

## 11.3.1.4 Advanced settings

**Setup** → **Sensor Setup** → **Advanced**

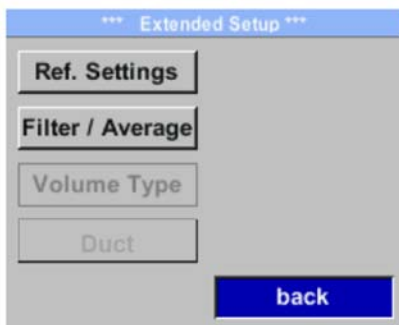


## 11.3.1.5 Definition of the reference conditions

Here can be defined the desired measured media reference conditions for pressure and temperature and times for the filter and averaging.

- Factory presetting for reference temperature and reference pressure are 20 °C, 1000 hPa.
- All volume flow values (m<sup>3</sup>/h) and consumption values indicated in the display are related to 20 °C and 1000 hPa (according to ISO 1217 intake condition).
- Alternatively, 0 °C and 1013 hPa (=standard cubic meter) can also be entered as a reference.
- **Do not enter the operation pressure or the operation temperature under reference conditions!**


**Setup** → **Sensor Setup** → **Advanced** → **Ref. Settings**

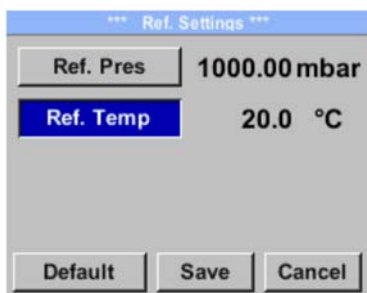

To make changes, first select a menu with button „△“ and confirm selection by pressing „OK“.

# KEP-2 bi-directional

Setup → Sensor Setup → Advanced → Ref. Settings → Ref.Pres

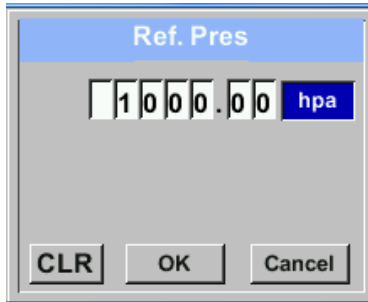


In order to change, e.g. the unit, first select by pressing key „ $\Delta$ “ the field “Units” and then key “OK”.

Select with the key „ $\Delta$ “ the correct unit and then confirm selection by pressing 2x „OK”.


Input / change of the value by selecting the respective position with button „ $\Delta$ “ and entering by pressing button „OK” .

Setup → Sensor Setup → Advanced → Ref. Settings → Ref.Temp

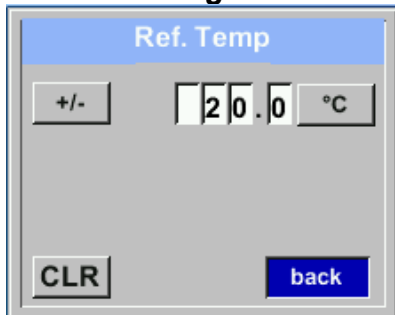

By pressing „ $\Delta$ “ the position value is incremented by 1. Complete with “OK” and activate next number position.

Procedure for changing the reference temperature is the same.

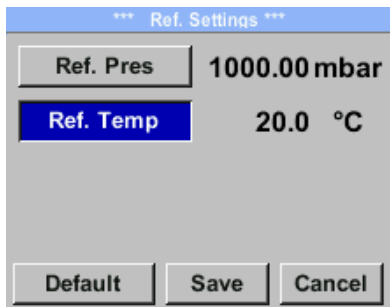


All changes have to be stored by pressing „Save”.

With „Default“ the sensor is reset to calibration settings.


## 11.3.1.5.1 Time setting for filtering

Setup → Sensor Setup → Advanced → *Filtertime*

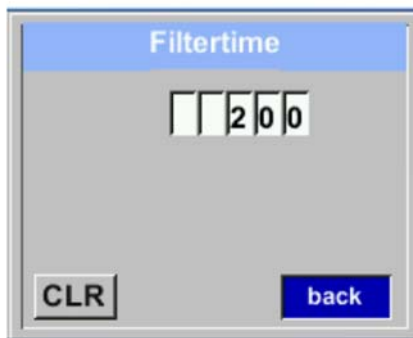

Under item "*Filtertime*" an attenuation can be defined.  
Input values of 0 -10000 in [ms] are possible

Setup → Sensor Setup → Advanced → *AV-Time*

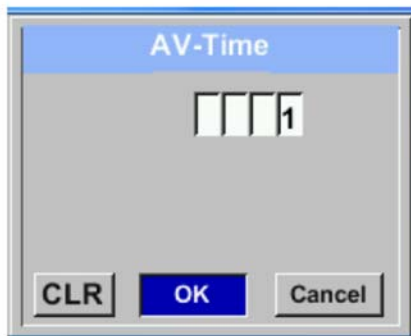

The time period for averaging can be entered here.

Input values of -1440 1 [minutes] are possible.

For average values see display window 3 + 4

## 11.3.1.6 Setting of Zeropoint and Low-flow cut off


Setup → Sensor Setup → *ZP Adjust*



To make changes, first select a menu with button „△“ and confirm selection by pressing „OK“.

# KEP-2 bi-directional

Setup → Sensor Setup → ZP Adjust → ZeroPnt

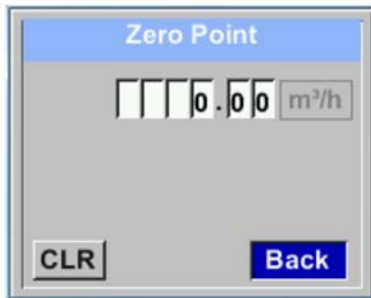


When, without flow, the installed sensor shows already a flow value of > 0 m<sup>3</sup>/h herewith the zero point of the characteristic could be reset.

For an input / change of the value select with the button „Δ“ the respective number position and activate it with „OK“.

By pressing „Δ“ the position value is incremented by 1. Confirm the input with „OK“ and activate next number position.

Leave menu with button „Back“

Setup → Sensor Setup → ZP Adjust → CutOff

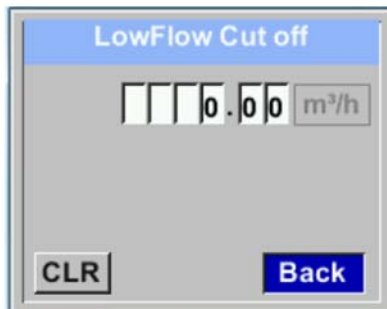


With the low-flow cut off activated, the flow below the defined "LowFlow Cut off" value will be displayed as 0 m<sup>3</sup>/h and not added to the consumption counter.

For an input / change of the value select with the button „Δ“ the respective number position and activate it with „OK“.

By pressing „Δ“ the position value is incremented by 1. Confirm the input with „OK“ and activate next number position.

Leave menu with button „Back“

Setup → Sensor Setup → ZP Adjust t → Reset

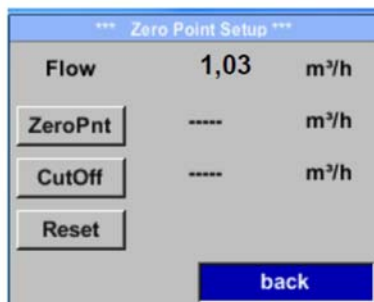

By selection of „Reset“ all settings for „ZeroPnt“ and „CutOff“ are reset.

Menu item to be select with button „Δ“ and confirm the reset with „OK“ .

Leave menu with button „Back“

## 11.3.2 Modbus settings

### 11.3.2.1 Modbus RTU Setup

The Flow sensors KEP-2 comes with a Modbus RTU Interface. Before commissioning the sensor, the communication parameters

- Modbus ID, Baudrate, Parität and Stoppbit

must be set in order to ensure the communication with the Modbus master.

#### Settings → Modbus Setup



For changes, e.g. the sensor ID, first select by pressing key „△“ the field **“ID”** and then key **“OK”**.

Select the desired position by pressing the **“>”** and select with **“OK”** button.

Change values by pressing the **„△“** values takeover by pressing **“OK”**.

Inputs for baudrate, stopbit and parity is done analogue.

By means of the button "Byte Order" it is possible to change the data format (Word Order). Possible formats are "ABCD" (Little Endian) and "CDAB" (Middle Endian)

Saving the changes by pressing **“Save”**, therefore select it with key **„△“** and then confirm it with **“OK”**.


#### Default values out of factory:

Modbus ID:	1
Baud rate:	19200
Stoppbit:	1
Parity:	even
Byte Order:	ABCD




# KEP-2 bi-directional

**Remark:** If the sensor is placed at the end of the Modbus system a termination is required. The sensors have an internal switchable termination, therefore the 6 fastening screws from the lid are to be released and set the internal DIP switch to “ON”.

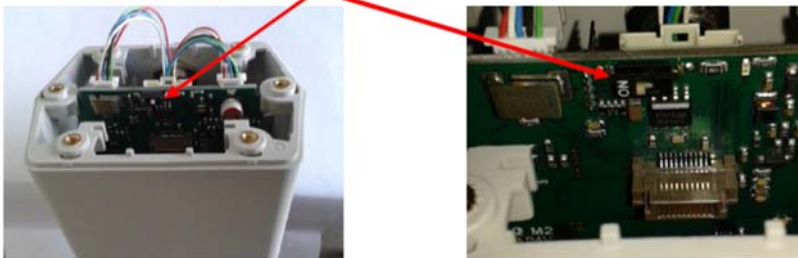


Alternatively, a 120R resistor can be installed in the plug between pin 2 and pin 4. It must be ensured that the connection plugs are still plugged and the gasket is installed correctly.

## Settings → Network Setup

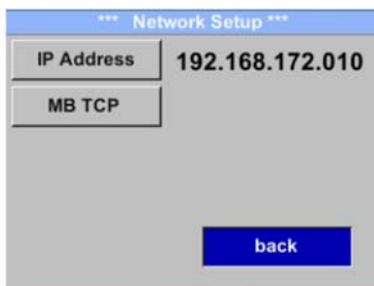

### 11.3.2.1.1 Network Setup DHCP

#### Settings → Network Setup Settings → IP Address

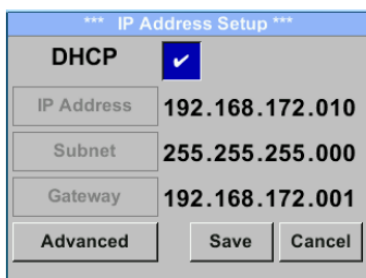

Here you can set up and made a connection, with or without *DHCP*, to a computer.

**Remark:**

With activated *DHCP* the automatic integration of the sensor in an existing network is possible, without a manual configuration.

Storing of settings by pressing “*Save*”



## 11.3.2.1.2 Network Settings static IP

Settings → Network Setup Settings → IP Address → IP Address  
 Settings → Network Setup Settings → IP Address → Sub Netz  
 Settings → Network Setup Settings → IP Address → Gateway

\*\*\* IP Address Setup \*\*\*

DHCP

IP Address 192.168.172.010

Subnet 255.255.255.000

Gateway 192.168.172.001

Advanced back

\*\*\* IP Address Setup \*\*\*

DHCP

IP Address 192.168.172.010

Subnet 255.255.255.000

Gateway 192.168.172.001

Advanced back

IP Setup

1 9 2

CLR back

For manual (static) IP, the "IP Address", "Subnet" and "Gateway" selection keys must be selected and activated with "OK".

The first data field of the selection, in this case the IP address, is then marked (red).

Confirm with "OK" the corresponding input menu is opened.

By means of ">", the next data field is changed.

Select the desired position with the ">" key and activate it with the "OK" key.

Change the values with the ">" key, and accept the values with the "OK" key.

Procedure for "Subnet" and "Gateway" is analogous.

Subnet Setup

2 5 5

CLR back

Gateway Setup

1 9 2

CLR back

\*\*\* IP Address Setup \*\*\*

DHCP

IP Address 192.168.172.011

Subnet 255.255.255.000

Gateway 192.168.172.001

Advanced Save Cancel

Store the settings by „Save“

# KEP-2 bi-directional

---

## 11.3.2.2 Modbus Settings register (2001...2005)

Modbus Register	Register Address	No. of Byte	Data Type	Description	Default Setting	Read Write	Unit /Comment
2001	2000	2	UInt16	Modbus ID	1	R/W	Modbus ID 1...247
2002	2001	2	UInt16	Baudrate	4	R/W	0 = 1200 1 = 2400 2 = 4800 3 = 9600 4 = 19200 5 = 38400
2003	2002	2	UInt16	Parity	1	R/W	0 = none 1 = even 2 = odd
2004	2003	2	UInt16	Number of Stopbits		R/W	0 = 1 Stop Bit 1 = 2 Stop Bit
2005	2004	2	UInt16	Word Order	0xABCD	R/W	0xABCD = Big Endian 0xCDAB = Middle Endian

## KEP-2 bi-directional

### 11.3.2.3 Modbus Values Register (1001 1500)

Modbus Register	Register Adress	No.of Byte	Data Type	Description	Default	Read Write	
1101 10101	1100 10100	4	Float	Flow in m <sup>3</sup> /h		R	Richtung Grün Richtung Blau
1109 10109	1108 10108	4	Float	Flow in Nm <sup>3</sup> /h		R	Richtung Grün Richtung Blau
1117 10117	1116 10116	4	Float	Flow in m <sup>3</sup> /min		R	Richtung Grün Richtung Blau
1125 10125	1124 10124	4	Float	Flow in Nm <sup>3</sup> /min		R	Richtung Grün Richtung Blau
1133 10133	1132 10132	4	Float	Flow in ltr/h		R	Richtung Grün Richtung Blau
1141 10141	1140 10140	4	Float	Flow in Nltr/h		R	Richtung Grün Richtung Blau
1149 10149	1148 10148	4	Float	Flow in ltr/min		R	Richtung Grün Richtung Blau
1157 10157	1156 10156	4	Float	Flow in Nltr/min		R	Richtung Grün Richtung Blau
1165 10165	1164 10164	4	Float	Flow in ltr/s		R	Richtung Grün Richtung Blau
1173 10173	1172 10172	4	Float	Flow in Nltr/s		R	Richtung Grün Richtung Blau
1181 10181	1180 10180	4	Float	Flow in cfm		R	Richtung Grün Richtung Blau
1189 10189	1188 10188	4	Float	Flow in Ncfm		R	Richtung Grün Richtung Blau
1197 10197	1196 10196	4	Float	Flow in kg/h		R	Richtung Grün Richtung Blau
1205 10205	1204 10204	4	Float	Flow in kg/min		R	Richtung Grün Richtung Blau
1213 10213	1212 10212	4	Float	Flow in kg/s		R	Richtung Grün Richtung Blau
1221 10221	1220 10220	4	Float	Flow in kW		R	Richtung Grün Richtung Blau

## KEP-2 bi-directional

Modbus Register	Register Address	No.of Byte	Data Type	Description	Default	Read Write	
1269 10269	1268 10268	4	UInt32	Consumption m <sup>3</sup> before comma	x	R	Richtung Grün Richtung Blau
1275 10275	1274 10274	4	UInt32	Consumption Nm <sup>3</sup> before comma	x	R	Richtung Grün Richtung Blau
1281 10281	1280 10280	4	UInt32	Consumption ltr before comma	x	R	Richtung Grün Richtung Blau
1287 10287	1286 10286	4	UInt32	Consumption Nltr before comma	x	R	Richtung Grün Richtung Blau
1293 10293	1292 10292	4	UInt32	Consumption cf before comma	x	R	Richtung Grün Richtung Blau
1299 10299	1298 10298	4	UInt32	Consumption Ncf before comma	x	R	Richtung Grün Richtung Blau
1305 10305	1304 10304	4	UInt32	Consumption kg before comma	x	R	Richtung Grün Richtung Blau
1311 10311	1310 10310	4	UInt32	Consumption kWh before comma	x	R	Richtung Grün Richtung Blau
1347 10347	1346 10346	4	Float	Velocity m/s			Richtung Grün Richtung Blau
1355 10355	1354 10354	4	Float	Velocity Nm/s			Richtung Grün Richtung Blau
1363 10363	1362 10362	4	Float	Velocity Ft/min			Richtung Grün Richtung Blau
1371 10371	1370 10379	4	Float	Velocity NFt/min			Richtung Grün Richtung Blau
1419 10419	1418 10418	4	Float	GasTemp °C			Richtung Grün Richtung Blau
1427 10427	1426 10426	4	Float	GasTemp °F			Richtung Grün Richtung Blau

**Remark:**

For more additional Modbus values please refer to separate Instruction manual Modbus Installation and Operating Instructions for the sensors KEP-1 and KEP-2.

## 11.3.3 Pulse/Alarm

Remark: Settings are valid for both pulse- and alarm-outputs


Setup → Sensor Setup → Pulse/ Alarm

The galvanically isolated output can be defined as pulse- or alarm output. Selection of field „Relay Mode” with key „Δ” and change modus by pressing key „OK”.

For alarm output following units could be chosen: kg/min, cfm, ltr/s, m<sup>3</sup>/h, m/s, °F, °C and kg/s. „Value” defines the Alarm value, „Hyst.” defines the desired hysteresis and with „Hi-Lim” or „Lo-Lim” the alarm settings when the alarm is activated  
 Hi-Lim: Value over limit  
 Lo-Lim: Value under limit

For the pulse output following units could be chosen: kg, cf, ltr and m<sup>3</sup>. The pulse value definition to be done in menu „Value”. Lowest value is depending on max. flow of sensor and the max frequency of pulse output of 50Hz.

With „Polarity” the switching state could be defined. Pos. = 0 → 1 neg. 1 → 0



### 11.3.3.1 Pulse output

The maximum frequency for pulse output is 50 pulses per second (50 Hz). The Pulse output is delayed by 1 second

Pulse value	[m <sup>3</sup> /h]	[m <sup>3</sup> /min]	[l/min]
0.1 ltr / Pulse	18	0,3	300
1ltr / Pulse	180	3	3000
0.1m <sup>3</sup> / Pulse	18000	300	300000
1 m <sup>3</sup> / Pulse	180000	3000	3000000

Table 1 Maximum flow for pulse output


Entering pulse values that are not allow a presentation to the full scale value, are not allowed. Entries are discarded and error message displayed.

# KEP-2 bi-directional

## 11.3.4 User Setup.

### 11.3.4.1 Password

Settings → UserSetup → Password

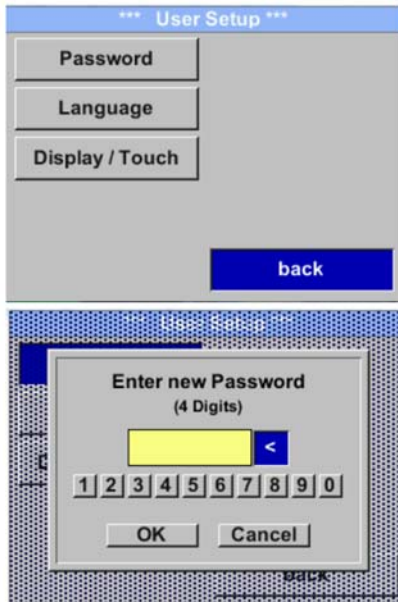

To make changes, first select a menu with button „ $\Delta$ “ and confirm selection by pressing „OK“.

It is possible to define a password. The required password length is 4 digits. Please select with button „ $\Delta$ “ a figure and confirm it with „OK“. Repeat this 4 times.


With „ $\Delta$ “ the last figure could be deleted. Password input have to be inserted twice.

Confirmation of input/password by pressing „OK“.

Factory settings for password at the time of delivery: 0000 (4 times zero).

### 11.3.4.2 Language



Settings → User Setup → Language

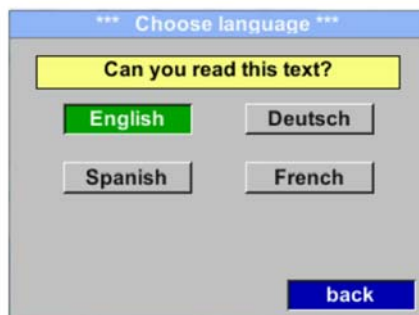

Currently 4 languages have been implemented and could be selected with button „ $\Delta$ “.

Change of language by confirming with “OK”. Leaving the menu with button “back”.

## 11.3.4.3 Display/Touch Settings → UserSetup → Display / Touch

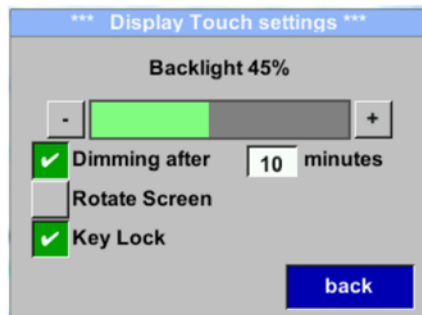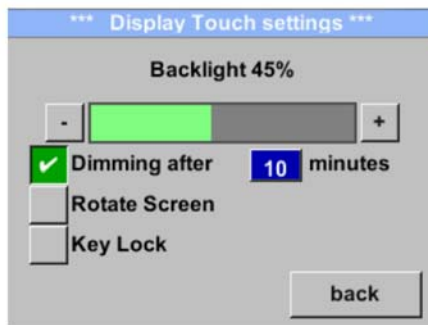

With the button „-“ and with button „+“ it is possible to adjust the backlight / display brightness. The actual / adjusted backlight brightness is shown in the graph „Backlight.“


By activation „Dimming after“ and entering a time a display dimming could be set.

With „Rotate Screen“ the display information could be rotated by 180°.

By activation of „Key Lock“ the operation of the sensor locked.

Unlocking the keyboard is only possible by restarting the sensor and calling the operating menu within the first 10s. To do this, use the „OK“ button to enter the operating menu during this period

## 11.3.5 Advanced Settings → Advanced

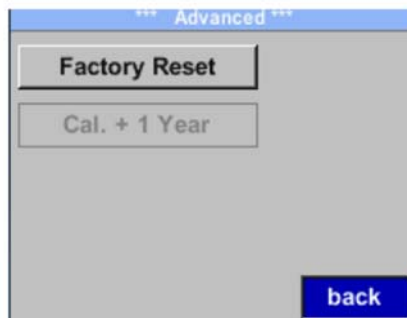

By pressing „Factory Reset“ the sensor is set back to the factory settings.


If the set/defined calibration date has been reached, the message „CAL“ appears in the display and the „Cal + 1 year“ key is activated. By pressing the „Cal + 1 year“ key, the next calibration can be extended by another year.

This is done at the user's own responsibility.




# KEP-2 bi-directional

## 11.3.6 4-20 mA Settings → 4-20mA

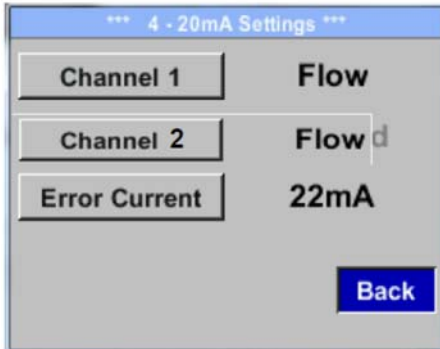

To make changes, first select a menu with button „ $\Delta$ “ and confirm selection by pressing „OK“.

## Settings → 4-20mA → Channel 1

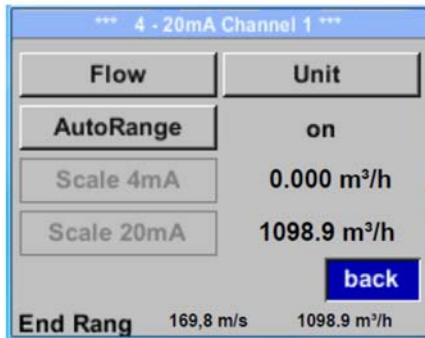


The 4-20 mA Analogue output of the Sensor VA 500 can be individually adjusted.

It is possible to assign following values „Temperature“, „Velocity“ und „Flow“ to the channel CH 1.

To make changes, first select the value item with button „ $\Delta$ “ and confirm


Moving between the different measurements values or to deactivate the 4-20mA with setting to „unused“ by pressing „OK“.

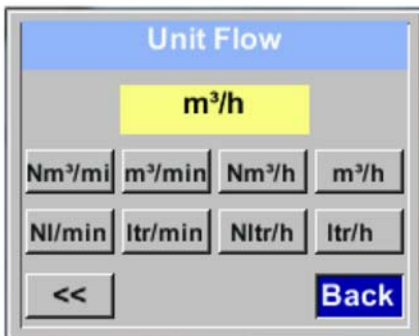

To the selected measurement value a corresponding / appropriate unit needs to be defined. Select „Unit“ with „ $\Delta$ “ and open menu with „OK“.

Select required unit with „ $\Delta$ “ and take over by pressing „OK“.

Here e.g. for the measurement value Flow, procedure for the other measurements values is analog.

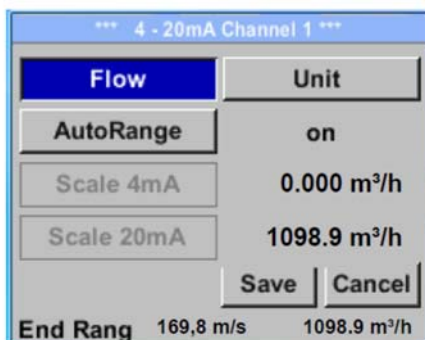


For saving the changes done press button „Save“ to discard the changes press button „Cancel“.

Leaving the menu with „Back“.



## Settings → 4-20mA → Channel 1 AutoRange

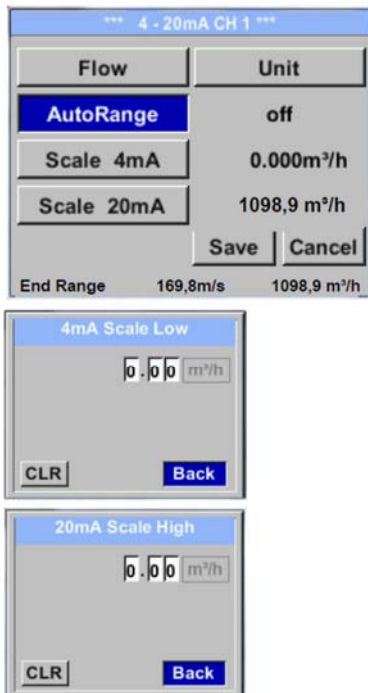

The scaling of the 4-20mA channel can be done automatically "Auto Range = on" or manual "AutoRange = off" .

With button „ $\Delta$ “ select the menu item „AutoRange“ select with „OK“ the desired scaling method. (Automatically or manually)

In case of **AutoRange = off** with „Scale 4mA“ and „Scale 20mA“ the scale ranges needs to be defined.

Select with button „ $\Delta$ “ the item „Scale 4mA“ or „Scale 20mA“ and confirm with „OK“ .


Input of the scaling values will be analogous as described before for value settings.

Using „CLR“ clears up the complete settings at once.

For „Auto on“, the max. scaling is calculated based on the inner tube diameter, max. measurement range and the reference conditions settings.

Take over of the inputs with „Save“ and leaving the menu with „Back“.

## Settings → 4 -20mA → Error Current

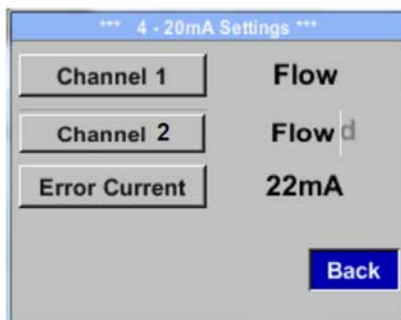

This determines what is output in case of an error at the analog output.

- 2 mA Sensor error / System error
- 22 mA Sensor error / System error
- None Output according Namur (3.8mA – 20.5 mA)  
 < 4mA to 3.8 mA Measuring range under range  
 >20mA to 20.5 mA Measuring range exceeding

To make changes first select a menu item "Current Error" with button „ $\Delta$ “ and then select by pressing the „OK“ the desired mode


For saving the changes done press button „Save“ to discard the changes press button „Cancel“.

Leaving the menu with „Back“.

# KEP-2 bi-directional


## 11.3.7 KEP-2 Info

Setup → Sensor Setup → Info

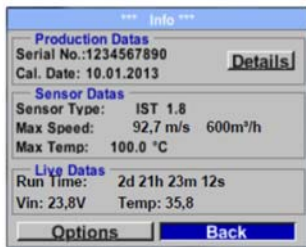

Here you get a brief description of the sensor data incl. the calibration data.

Under **Details**, you are able to see in addition the calibration conditions.

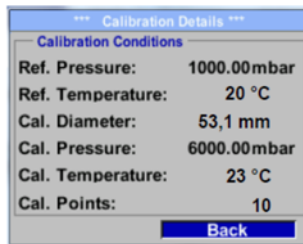

## 11.3.8 Default Settings communication

Primary Adress\*: 1  
ID: Seriennummer des Sensors  
Baud rate\*: 2400  
Medium\*: depending on medium (Gas oder Compressed Air)  
VIF coding : Primary VIF

Both addresses, Primary address and ID, could be automatic searched in the M-Bus system.

## 11.3.9 Default values transmitted

Value 1 with [Unit]\*: Consumption [m³]  
Value 2 with [Unit]\*: Flow [m³/h]  
Value 3 with [Unit]\*: Gas temperature [°C]

All Values could be changed / preset in production or with Service software.

## 12. Status / Error messages

### 12.1 Status messages

- **CAL**

On the part of Kobold Messring GmbH a regular re-calibration is recommended, see chapter 14.

At delivery, the date at which the next recalibration is recommended is internally entered. When this date is reached, a message appears in the display with the status message „CAL“.

**Note: The measurement will continue without interruption or restriction.**



### 12.2 Error messages

- **Low Voltage**

If the supply voltage is less than 11 V, the warning message „Low Voltage“ is displayed. This means that the sensor can no longer work / measure correctly and thus there are none measured values for flow, consumption and speed are available.

- **Heater Error**

The error message „Heater Error“ occurs in case of failure of the heating sensor.

- **Internal Error**

In the case of this message „Internal Error“, the sensor has an internal read error on e.g. EEPROM, AD converter etc. detected.

- **Temp out of Range**

At media temperatures outside the specified temperature range, the status message „Temp out of Range“ occurs.


- **Low Voltage 4-20 mA**

For sensors with a galvanically isolated 4-20mA output, a min. Supply voltage of 17.5 V is required. If this value is undershot, the error message „Low Voltage 4-20 mA“ is displayed.

# KEP-2 bi-directional

---

Error messages:

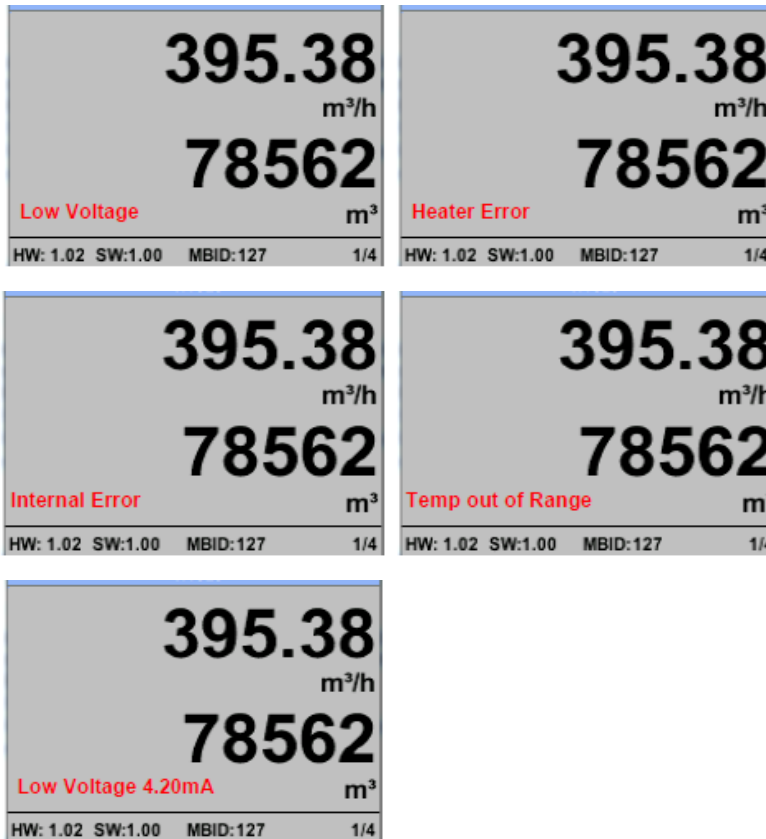

## 13. Maintenance

---

The sensor head should be checked regularly for dirt and cleaned if necessary. Should dirt, dust or oil accumulate on the sensor element, a deviation will occur in the measuring value. An annual check is recommended. Should the compressed air be heavily soiled this interval must be shortened.

## 14. Cleaning of the sensor head

---

The sensor head can be cleaned by carefully moving it back and forth in warm water with a small amount of washing-up liquid. Avoid physical intervention on the sensor (e.g. using a sponge or brush). If soiling cannot be removed, the manufacturer must carry out service and maintenance.

### 15. Re-Calibration

---

If no customer specifications are given then we recommend carrying out calibration every 12 months. For this purpose, the sensor must be sent to the manufacturer

### 16. Spare parts and repair

---

For reasons of measuring accuracy spare parts are not available. If parts are faulty, they must be sent to the supplier for repair.

If the measuring device is used in important company installations, we recommend keeping a spare measuring system ready.

### 17. Calibration

---

According to DIN ISO certification of the measuring instruments we recommend to calibrate and if applicable to adjust the instruments regularly from the manufacturer. The calibration intervals should comply with your internal specification. According to DIN ISO we recommend a calibration interval of one year for the instrument KEP-2.

On request and additional payment, calibration-certificates could be issued. The precision is given due to use DKD-certified flow meters and verifiable.

### 18. Warranty

---

If you have reason for complaint, we will of course repair any faults free of charge if it can be proven that they are manufacturing faults. The fault should be reported immediately after it has been found and within the warranty time guaranteed by us. Excluded from this warranty is damage caused by improper use and non-adherence to the instruction manual.

The warranty is also cancelled once the instrument has been opened - as far as this has not been mentioned in the instruction manual for maintenance purposes - or if the serial number in the instrument has been changed, damaged or removed.

The warranty time for the KEP-2 is 12 months. If no other definitions are given the accessory parts have a warranty time of 6 months. Warranty services do not extend the warranty time.

## **KEP-2 bi-directional**

---

If in addition to the warranty service necessary repairs, adjustments or similar are carried out the warranty services are free of charge but there is a charge for other services such as transport and packaging costs. Other claims, especially those for damage occurring outside the instrument, are not included unless responsibility is legally binding.

### **After sales service after the warranty time has elapsed**

We are of course there for you even after the warranty time has elapsed. In case of malfunctions, please send us the instrument with a short-form description of the fault. Please do not forget to indicate your telephone number so that we can call you in case of any questions.

## **19. Technical Information**

---

Operating instructions, data sheet, approvals and further information via the QR code on the device or via [www.kobold.com](http://www.kobold.com)

## **20. Order Codes**

---

Operating instructions, data sheet, approvals and further information via the QR code on the device or via [www.kobold.com](http://www.kobold.com)

## **21. Dimensions**

---

Operating instructions, data sheet, approvals and further information via the QR code on the device or via [www.kobold.com](http://www.kobold.com)


## 22. Disposal

### Note!

- Avoid environmental damage caused by media-contaminated parts.
- Dispose of the device and packaging in an environmentally friendly manner.
- Comply with applicable national and international disposal regulations and environmental regulations.

### Batteries

Batteries containing pollutants are marked with a sign consisting of a crossed-out garbage can and the chemical symbol (Cd, Hg, Li or Pb) of the heavy metal that is decisive for the classification as containing pollutants:

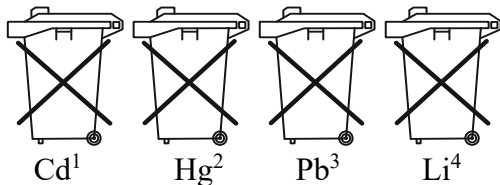

1. „Cd" stands for cadmium
2. „Hg" stands for mercury
3. „Pb" stands for lead
4. „Li" stands for lithium

### Electrical and electronic equipment



## 23. EU Declaration of Conformance

---

We, KOBOLD Messring GmbH, Nordring 22-24, 65719 Hofheim, Germany, declare under our sole responsibility that the product:

**Thermal Flow Meter for bi-directional measurements      Model: KEP-2**

to which this declaration relates is in conformity with the following EU directives stated below:

<b>2014/30/EU</b>	<b>EMC Directive</b>
<b>2011/65/EU</b>	<b>RoHS (category 9)</b>
<b>2015/863/EU</b>	<b>Delegated Directive (RoHS III)</b>

Also, the following standards are fulfilled:

**EN IEC 61326-1:2013**

Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 1: General requirements

**EN 55011:2016+A1:2017\*A11:2020+A2:2021**

Industrial, scientific and medical equipment - Radio-frequency disturbance characteristics - Limits and methods of measurement

Hofheim, 13 Feb. 2024



H. Volz  
General Manager

J. Burke  
Compliance Manager